

Auto APN

[Main Page](#) > [FAQ](#) > [Control & Configuration](#) > **Auto APN**



Contents

- [1 How does Auto APN work](#)
- [2 How to configure Auto APN](#)
 - [2.1 RUTOS WebUI](#)
 - [2.2 Legacy WebUI](#)
- [3 How to configure custom APN](#)
 - [3.1 RUTOS WebUI](#)
 - [3.2 Legacy WebUI](#)

How does Auto APN work

Teltonika devices have an Auto APN feature that allows the device to analyze the SIM card. And automatically select the correct APN information from a pre-loaded database. This function reduces the time required to configure the device in different locations with different providers.

<https://wiki.teltonika-networks.com/view/File:How-Auto-APN-works.mp4>

How to configure Auto APN

RUTOS WebUI

Instructions:

1. Log into your device's WebUI.
2. Navigate to **Network** → **WAN**.
3. Press **Edit** on the mobile interface.

4. Untoggle / Toggle **Auto APN**.

Legacy WebUI

Auto APN is enabled by **default**. But if you have just inserted the SIM card you might need to restart (RUT9XX/RUT2XX) routers modem first ([Status/Mobile/Mobile Information](#)).

<https://wiki.teltonika-networks.com/view/File:RMS-how-to-configure-Auto-APN.mp4>

Instructions:

1. Log into your device's WebUI.
2. Navigate to **Network** → **Mobile**.
3. Uncheck / Check **Auto** next to APN.



How to configure custom APN

RUTOS WebUI

1. Log into your device's WebUI.
2. Navigate to **Network** → **WAN** (Basic WebUI mode) or **Network** → **Interfaces** (Advanced WebUI mode).

3. Press **Edit** on the mobile interface.



4. Untoggle **Auto APN**.  5. Enter desired **APN**.



Legacy WebUI

Instructions:

1. Log into your device's WebUI.
2. Navigate to **Network** → **Mobile**.
3. Uncheck **Auto** next to APN.



5. Enter desired **APN**.

