

AT+QSCLK Enable/Disable Entering into Sleep Mode

The command is used to control whether the module enters into sleep mode. When entering into sleep mode is enabled, DTR is pulled up and WAKEUP_IN is pulled up, the module can directly enter into sleep mode. If entering into sleep mode is disabled, DTR is pulled down and WAKEUP_IN is pulled down, there is a need to pull the DTR pin and the WAKEUP_IN pin up first, and then the module can enter into sleep mode.