

Mobile Parameters to HTTP Server

□

Contents

- [1 Introduction](#)
- [2 Prerequisites](#)
- [3 Preparation](#)
- [4 Configuration](#)
 - [4.1 Making a Directory and Script](#)

Introduction

Mobile parameters are needed to measure signal features that can be acquired using **gsmctl** commands. However, there is no available command to check/display all of the desired details.

With that said, a custom script is needed to show them using one command. This article provides step-by-step instructions on how to write the script, programs that are required, and how to run it.

-
- First you want to make sure that you have **ADVANCED mode** enabled. This will allow you to choose from a larger variety of settings.



Prerequisites

For this particular configuration you will need:

- A Gateway or a Router with GSM (RUTX14 is being used in the example)
- 1 SIM card
- 1 PC
- HTTP Server (Hercules)

Preparation

- Prepare RUTX14, power up the device, insert the sim card, check that mobile interface is active and working. SIM1, PWR and signal strength indicators should light up.

Network -> Interfaces should look similar to this:



Configuration

Making a Directory and Script

1. Connect to RUTX14 CLI using PUTTY or WEBUI.
2. Create a new directory for the custom script.
 - `mkdir /etc/config/scripts`



3. Then create a new .sh file.
 - `touch /etc/config/scripts/<filename>.sh`



4. To edit the filename, use **vi <filename>.sh**. Press **I**. To save and exit, **Press Esc** then **:x** or to exit without saving, **Press Esc** then **:q!**.

