

OTD140 Side Widget

The information in this page is updated in accordance with firmware version [OTD_R_00.07.08.2](#).

Notice that not all provided pictures can match the information on your device.



Contents

- [1 Quick Settings](#)
- [2 Dual Sim](#)
- [3 System Status](#)
- [4 RMS Status](#)
- [5 Settings](#)
- [6 Overview page toggles](#)

Quick Settings

The first set of quick buttons provides options to toggle various settings on or off, allowing users to customize their preferences with ease.



Dual Sim

Dual sim widget



System Status

The **System status** page contains information summaries about CPU, RAM, FLASH usages and router uptime.



On the top right corner is **Settings** button that transfers you to **Status System page**.

RMS Status

RMS status widget



On the top right corner is **Settings** button that transfers you to **RMS page**.

Settings

The last page is big **Settings** button that allows you quickly show or hide available settings.
Available settings for **OTD140** device:

Mobile status

System status

RMS status

Overview page toggles

If the user is on the Status Overview page, a bonus widget will appear below the side widget arrow.
This setting allows the user to toggle overview page widgets and hide certain information if preferred.

