RUT850 Network

 $\frac{\text{Main Page} > \text{RUT Routers} > \text{RUT850} > \text{RUT850 Manual} > \text{RUT850 WebUI} > \text{RUT850 Status section} > \text{RUT850}$ Network \square

Contents

- 1 Summary
- 2 Mobile
- <u>3 WAN</u>
- 4 Wireless
- 5 Wireless Information
 - 5.1 Wireless Status
 - <u>5.2 Associated Stations</u>

Summary

The **Network** page contains information related to the device's networking features. This chapter is an overview of the Network page in RUT850 devices.

Mobile

The **Mobile** section displays information about the mobile connection and the SIM card in use. The figure below is an example of the Mobile page:



field name	description
Data connection state	Indicates whether the device has an active mobile data connection
IMEI	The IMEI (International Mobile Equipment Identity) is a unique 15 decimal digit number used to identify cellular modules. GSM network operators use the IMEI to identify devices in their networks
IMSI	The IMSI (international mobile subscriber identity) is a unique 15 decimal digit (or less) number used to identify the user of a cellular network
ICCID	SIM card's ICCID is a unique serial number used to identify the SIM chip
SIM card state	The current SIM card state. Possible values are: • Ready - SIM card is inserted and ready to be used • Inserted - SIM card is inserted • Not inserted - SIM card is not inserted • Unknown - unable to obtain SIM card state value. Possible communication issue between the the device and the modem
Signal strength	Received signal strength indicator (RSSI) measured in dBm. Values closer to 0 indicate a better signal strength
Cell ID	The ID of the cell that the modem is currently connected to
	Overall signal quality is defined by different measurements for different connection types. Short explanations and recommendations are provided below. Click here for more in-depth information or click on one of the links below: • 4G • RSRP - reference signal received power, measured in dBm. Values closer to 0 indicate better signal strength • RSRO - reference signal received quality, measured in dB. Values closer to 0 indicate a better rate of information transfer
Signal level measurements	- <u>SINR</u> - signal-to-interference-plus-noise ratio, measured in dB. Higher values indicate a better rate of information transfer • 3G
	- SG - EC/IO - downlink carrier-to-interference ratio. Values range from -20 to 0 (closer to 0 indicates better signal quality/cleanliness) - RSCP - received signal code power. Values range from -124 to 0 (closer to 0 indicates better signal stength) - 2G - PSCP - received signal code power. Values range from -124 to 0 (closer to 0 indicates better signal stength)
	- RSSI - received signal strength indicator, measured in dBm. Values closer to 0 indicate better signal strength
Operator	Network operator's name

Shows whether the network has currently indicated the registration of the mobile device. Possible values are:

· Unregistered - not registered to a network and the device is not currently searching for a new operator to register to

· Registered (home) - registered, home network

 Searching - not registered to a network, but the device is currently searching for a new operator to register to
 Network denied - registration to network denied by operator Operator state

· Unknown - operator state is currently unknown

• Registered (roaming) - registered to network, roaming conditions

Mobile connection connection type. Possible values are:

• 2G: 2G (GSM), 2G (GPRS), 2G (EDGE)

• 3G: 3G (WCDMA), 3G (HSDPA), 3G (HSUPA), 3G (HSPA), 3G (HSPA+), 3G (DC-HSPA+), 3G (HSDPA+HSUPA), UMTS Connection type

• 4G: 4G (LTE)

 \bullet $N\!/\!A$ - not possible to determine at the moment

Connected band Currently used frequency band. For more information on supported frequency bands, click here

Bytes received Amount of data received through the mobile interface Amount of data sent through the mobile interface Bytes sent

Restart Modem Reboots the device's cellular module Restart Connection Restarts the mobile connection (Re)register Registers to the mobile network

Refresh Refreshes all information fields in the page

WAN

The WAN section displays information about the Main and Backup WAN connections. The figure below is an example of the Mobile page:



Description Field

WAN type. Possible values are:

Interface · Wired

Wireless

Connection type or protocol. The value displayed in this field is dependent on used WAN type. Possible values are:

Mobile WAN

QMI - Qualcomm MSM Interface, a proprietary protocol used between Qualcomm cellular processors and their software stacks

PPP - Point-to-Point Protocol; uses a dialling number to establish a data connection

Type

- DHCP - Dynamic Host Configuration Protocol; the WAN network interface controller acts as a DHCP client, meaning that it

receives a dynamically assigned IP address and other network configuration parameters

- Static - WAN network interface controller configuration parameters are set manually (used when the WAN gateway is not a DHCP server)

IP address Router's WAN IP address

WAN MAC MAC address of the WAN network interface controller (WiFi radio). This field is only visible if main WAN is set to WiFi

A netwask is used to define how "large" a network is by specifying which part of the IP address denotes the network and which part Netmask

denotes the device

Gateway Gateway of the default route - an IP address through which the router reaches the Internet

DNS DNS servers used by the main WAN connection Connected Currently used WAN connection uptime Backup WAN Status Displays the router's current WAN failover status Refreshes all information fields in the page Refresh

WAN settings can be customized via the **Network** \rightarrow **WAN** page.

Wireless

The **Wireless** section displays information about wireless connections and associated WiFi stations.

Wireless Information

The figure below is an example of the **Wireless Information** section:



Field name Description

Channel Currently used channel. In most countries there are 13 WiFi channels on the 2.4 GHz band (14 in Japan) to choose from Country Code Indicates currently used country code (SO/IEC 3166 alpha2 country codes as defined in ISO 3166-1 standard)

Wireless Status

The **Wireless Status** section contains information about Wireless Access Points. The figure below is an example of the **Wireless Status** section:



Field name Description

SSID The broadcasted SSID (Service Set Identifier) of the wireless network

Mode Connection mode. Can either be Access Point (AP) or Client. In AP mode others can connect to this router's wireless connection. In

client mode router connects to other wireless networks

Encryption The type of WiFi encryption used

Wireless MAC The MAC (Media Access Control) address of the access point radio

Signal Quality The signal quality between router's radio and some other device that is connected to the router

Bit rate

The maximum possible physical throughput that the router's radio can handle. Bit rate will be shared between router and other

possible devices which connect to local Access Point (AP)

Associated Stations

The **Associated Stations** section contains information about devices that are connected to Wireless Access Point. The figure below is an example of the **Associated Stations** section:



Field name Description

MAC address Associated station's MAC (Media Access Control) address

Device Name Currently connected device name

Signal Received Signal Strength Indicator (RSSI). Signal's strength measured in dBm

RX rate The rate at which packets are received from associated station TX rate The rate at which packets are sent to associated station