

RUT901 OPC UA Server

[Main Page](#) > [RUT Routers](#) > [RUT901](#) > [RUT901 Manual](#) > [RUT901 WebUI](#) > [RUT901 Services section](#) > **RUT901 OPC UA Server**

The information in this page is updated in accordance with firmware version [RUT9M_R_00.07.07.3](#).

□

Contents

- [1 Summary](#)
- [2 OPC UA Server Configuration](#)
- [3 OPC UA Server variables](#)

Summary

OPC Unified Architecture (**OPC UA**) is a cross-platform, open-source, IEC62541 standard for data exchange from sensors to cloud applications developed by the OPC Foundation. The *UA* in OPC UA stands for “Unified Architecture” and refers to the latest specification of the standard. It differs from its predecessor in that it is platform-independent, moving away from COM/DCOM to purely binary TCP/IP or alternatively SOAP.

This manual page provides an overview of the OPC UA Server in RUT901 devices.

Note: OPC UA Server is additional software that can be installed from the **System** → [Package Manager](#) page.

OPC UA Server Configuration

The **OPC UA Server Configuration** section is used to enable the local OPC UA server.

✖

Field	Value	Description
Enable	off on; default: off	Enables OPC UA server.
Port	integer [1..65535]; default: none	Service port.

OPC UA Server variables

All **RUTOS** device variables are described in the table below:

Note: All the variables have these qualities in common:

- Namespace index is 1
- Node ID type is string
- Read-only
- Updated upon request

	ID	Type	Description
sys_uptime		UINT32	System uptime in seconds.
sys_serial		String	Device serial number.
sys_devname		String	Device name.
sys_devcode		String	Device code.
sys_version		String	Firmware version.
sys_hostname		String	Hostname.
lan_mac		String	LAN MAC address.
lan_ip		String	IP address of LAN interface.
lan_mask		String	Subnet mask of LAN interface.
lan_gateway		String	Gateway IP address of LAN interface.
lan_dns		Array of String	IP addresses of LAN interface DNS servers.
wan_ip		Array of String	IP address of WAN interface.
io_din		Array of BOOL	Values of digital input pins.
io_dout		Array of BOOL	Values of digital output pins.
mob_modem_count		UINT32	Modem count.
mob_modem_imei		Array of String	Modem IMEI.
mob_modem_serial		Array of String	Modem serial number.
mob_modem_mnf		Array of String	Modem manufacturer name.
mob_modem_model		Array of String	Modem model name.
mob_modem_fw		Array of String	Modem firmware version string.
mob_modem_temp		Array of FLOAT	Modem temperature.
mob_sim_count		Array of UINT32	SIM count.
mob_sim		Array of UINT32	Selected SIM.
mob_sim_state		Array of String	SIM state.
mob_sim_iccid		Array of String	SIM ICCID.
mob_rssi		Array of INT32	RSSI.
mob_conn_type		Array of String	Data carrier type.
mob_conn_state		Array of String	Connection state.

mob_net_state

Array of String

Network link
state.

mob_operator

Array of String

Operator
name.