

RUT955 Traffic Logging

[Main Page](#) > [RUT Routers](#) > [RUT955](#) > [RUT955 Manual](#) > [RUT955 WebUI](#) > [RUT955 Services section](#) > **RUT955 Traffic Logging**

The information in this page is updated in accordance with firmware version [RUT9_R_00.07.06.11](#).

□

Contents

- [1 Summary](#)
- [2 Traffic Logging Settings](#)
- [3 FTP Settings](#)
 - [3.1 FTP Server](#)
 - [3.2 Upload Settings](#)

Summary

The **Traffic Logging** page provides the possibility to set up a periodic transfers of the selected traffic log to an FTP server.

This manual page provides an overview of the Traffic Logging page in RUT955 devices.

Note: Traffic Logging is additional software that can be installed from the **System** → [Package Manager](#) page.

Traffic Logging Settings

The **Traffic Logging Settings** section is used enable or disable traffic log data sending.



Field	Value	Description
Enable	off on; default: off	Turns Traffic Logging on or off.
Networks	network(s); default: lan	Selects the network(s) from which traffic logging data will be taken.

FTP Settings

The **FTP Settings** section is used to configure FTP server and upload settings.

FTP Server

The **FTP Server** section is used to configure the parameters required to login to an FTP server to

