

RUTC50 Reboot

[Main Page](#) > [RUTC Routers](#) > [RUTC50](#) > [RUTC50 Manual](#) > [RUTC50 WebUI](#) > [RUTC50 System section](#) > **RUTC50 Reboot**

The information in this page is updated in accordance with firmware version [RUTC_R_00.07.07.1](#).



Contents

- [1 Summary](#)

Summary

The **Reboot** button is used only to reboot the device. Click the 'Reboot' button if you wish to reboot the device. Button can be found by pressing the marked icon:



After confirming, device will be rebooted.

