

RUTC50 Services

[Main Page](#) > [RUTC Routers](#) > [RUTC50](#) > [RUTC50 Manual](#) > [RUTC50 WebUI](#) > [RUTC50 Status section](#) > **RUTC50 Services**

The information in this page is updated in accordance with firmware version [RUTC_R_00.07.08.2](#).

□

Contents

- [1 Summary](#)
- [2 Services](#)

Summary

The **Services** page is used for easy service management. From here you can check the status of most services and find a link to each of their configuration pages.

If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Advanced" button, located at the top of the WebUI.

✘

Services

The **Services** list displays the status of most of the device's services.

✘

Additional notes:

- The figure above is only an example. The actual ordering of the services on your devices will differ.
- Most services can be configured from the WebUI's 'Services' tab. Search the [RUTC50 Services section](#) for guidance.
- The rightmost column contains a 'Change Settings' button next to each service. If you click on of these buttons, you will be redirected to the respective service's configuration window. For example: if you click 'Change Settings' next to the RMS service, you will be redirected to the Services → Cloud Solution → [RMS](#) page.