

RUTC50 Wifi scanner

[Main Page](#) > [RUTC Routers](#) > [RUTC50](#) > [RUTC50 Manual](#) > [RUTC50 WebUI](#) > [RUTC50 Services section](#) > **RUTC50 Wifi scanner**

The information in this page is updated in accordance with firmware version [RUTC_R_00.07.07.1](#).

WiFi Scanner

The **WiFi Scanner** provides you with the possibility to scan and collect information about connected devices and surrounding access points. The collected data is sent using the [Data to Server](#) functionality.



Field	Value	Description
Enable 2.4GHz	off on; default: off	Enables or disables WiFi scanner.
Enable 5GHz	off on; default: off	Enables or disables WiFi scanner.
Interval	integer; default: 10	Interval between scans in seconds.