

RUTM08 LEDs

[Main Page](#) > [RUTM Routers](#) > [RUTM08](#) > [RUTM08 Manual](#) > **RUTM08 LEDs**

This page contains information the different types of LEDs and their behaviour on a RUTM08 device.



Contents

- [1 Power LED](#)
- [2 Ethernet port LEDs](#)

Power LED

The **power LED** is located on the bottom left corner of the front panel, just under the power connector.



It indicates whether the device is powered on or not.

| | State | Description |
|----------------|-------|---------------------------|
| LED turned on | | Device is powered on. |
| LED turned off | | Device is not powered on. |

Ethernet port LEDs

There are two **LEDs** located at the top of each **Ethernet port**.



They provide information on the current states of the Ethernet ports. Each port has two LEDs:

- **Orange** - 10/100 Mbps connection
- **Green**- 1000 Mbps connection

Below is an explanation on the behaviours of green and orange LEDs.

| | State | Description |
|--------------|-------|---|
| LED on | | A data connection on the port is operational (cable plugged in, end device visible, no data is being transferred). |
| LED off | | No data connection on the port is operational (no cable, bad cable or end device not visible for some other reason (such as damaged network card)). |
| LED blinking | | Connection established and data is being transferred over this port. |