RUTM08 Product Labels

<u>Main Page</u> > <u>RUTM Routers</u> > <u>RUTM08</u> > <u>RUTM08 Manual</u> > **RUTM08 Product Labels**

The information in this page is relevant from ${\bf 001}$ batch.

Label/Print on the box



Information displayed after scanning QR code:		Information displayed after scanning SN Barcode:	Information displayed after scanning Barcode:
SN:999999999;M:AABBCCDDEEFF;B:999;		999999999	4779051840465
×		×	×
Text on the label/print	QR or Barcode equivaler	nt Desc	cription
RUTM08000000*	-	Product code a.k.a., ordering code, displays under which product code the device was manufactured. Different product codes indicate different versions of the overall product. For example, devices with different product codes may support different LTE bands, come with different accessories, different firmware, etc. *RUTM08000000 is only for standard order codes	
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System (RMS). The device can be added to RMS via the System \rightarrow Administration \rightarrow RMS page	
LAN MAC	M		
EAN	-		ticle Number or EAN) is a standard describing a barcode e to identify a specific retail product type, in a specific er
BATCH NO:	В	Batch number is a number that indicates the batch of	materials

Label on the product



Information displayed after	scanning QR code:	Information displayed after scanning SN Barcode:	
SN:9999999999;M:AABBC0	CDDEEFF;U:admin;PW:999999	99;B:999; 9999999999	
×		×	
Text on the sticker	QR or Barcode equivalent	Description	
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System (\underline{RMS}). The device can be added to RMS via the $\underline{System} \rightarrow \underline{Administration} \rightarrow \underline{RMS}$ page	
LAN MAC	M	The media access control (MAC) address is a unique identifier used to distinguish a network interface controller for communication in the data link layer (OSI layer2) Ethernet LAN MAC address - MAC address of the LAN Ethernet network interface. It is also required when connecting the device to Teltonika's Remote Management System (RMS). The device can be added to RMS via the $\mathbf{System} \to \mathbf{Administration} \to \mathbf{RMS}$ page	
USERNAME	U	A default value "admin" is used for product connection	
PASSWORD	PW	A custom passphrase used for product connection (at least 8 characters long)	
BATCH NO:	В	Batch number is a number that indicates the batch of materials	