https://wiki.teltonika-networks.com/view/RUTX09_Product_Labels

RUTX09 Product Labels

<u>Main Page</u> > <u>RUTX Routers</u> > <u>RUTX09</u> > <u>RUTX09 Manual</u> > **RUTX09 Product Labels**

The information in this page is relevant from **041** batch.

Label/Print on the box

×

Information displayed after scanning QR code:			Information displayed after scanning SN Barcode:	
SN:999999999;I:9999999999999999;M:AABBCCDDEEFF;B:999; 9999999999				
×			×	
Text on the label/print	QR or Barcode equivalent		Description	
RUTX09000000*	-	Product code a.k.a., ordering code, displays under which product code the device was manufactured. Different product codes indicate different versions of the overall product. For example, devices with different product codes may support different LTE bands, come with different accessories, different firmware, etc. *RUTX09000000 is only for standard order codes		
SERIAL	SN		t device identifier. It is required when connecting the device to Teltonika's (S). The device can be added to RMS via the System \rightarrow Administration \rightarrow	
IMEI	I		quipment Identity) is a unique 15 decimal digit number used to identify perators use the IMEI to identify devices in their networks	
LAN MAC	М	controller for communication in th Ethernet LAN MAC address - MAC	C address of the LAN Ethernet network interface. It is also required when a's Remote Management System (<u>RMS</u>). The device can be added to RMS via	
EAN	-		(a.k.a. European Article Number or EAN) is a standard describing a barcode a used in global trade to identify a specific retail product type, in a specific pecific manufacturer	
BATCH NO:	В	Batch number is a number that in	dicates the batch of materials	

Label on the product

×

Information displayed after s	canning QR code:	Information displayed after scanning SN Barcode:		
SN:9999999999;I:99999999999999999;M:AABBCCDDEEFF;U:admin;PW:99999999;B:999; 9999999999				
×		×		
Text on the sticker	QR or Barcode equivalent	Description		
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System (<u>RMS</u>). The device can be added to RMS via the System \rightarrow Administration \rightarrow RMS page		
IMEI	Ι	The IMEI (International Mobile Equipment Identity) is a unique 15 decimal digit number used to identify cellular modules. GSM network operators use the IMEI to identify devices in their networks		
LAN MAC	М	The media access control (MAC) address is a unique identifier used to distinguish a network interface controller for communication in the data link layer (OSI layer2) Ethernet LAN MAC address - MAC address of the LAN Ethernet network interface. It is also required when connecting the device to Teltonika's Remote Management System (<u>RMS</u>). The device can be added to RMS via the System \rightarrow Administration \rightarrow RMS page		
USERNAME	U	A default value "admin" is used for product connection		
PASSWORD	PW	A custom passphrase used for product connection (at least 8 characters long)		
BATCH NO:	В	Batch number is a number that indicates the batch of materials		