

# RUTX10 Logging in

[Main Page](#) > [RUTX Routers](#) > [RUTX10](#) > [RUTX10 Manual](#) > **RUTX10 Logging in**

## Configure your computer (Windows)

1. Power up {{{name}}} and connect one LAN cable (included in a box) end to {{{name}}} Ethernet port and other to your computer.
2. Setup Ethernet network adapter on your computer (right click on **Ethernet Network Connection** and select **Properties**. After that select **Internet Protocol Version 4 (TCP/IP)** and click **Properties**).
3. Select **Obtain IP address** and **Obtain DNS server address automatically** if they are not selected. Click **OK**.



## Login to device

1. To enter the router's Web interface (WebUI), type `http://192.168.1.1` into the URL field of your Internet browser.
2. Use the following login information when prompted for authentication:



3. After you login, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter and one digit. This step is mandatory and **you will not be able to interact with the router's WebUI before you change the password**.
4. When you change the router's password, the Configuration Wizard will start. The **Configuration Wizard** is a tool used to setup some of the router's main operating parameters.