https://wiki.teltonika-networks.com/view/RUTX10_Network

RUTX10 Network

<u>Main Page</u> > <u>RUTX Routers</u> > <u>RUTX10</u> > <u>RUTX10 Manual</u> > <u>RUTX10 WebUI</u> > <u>RUTX10 Status section</u> > **RUTX10 Network**

The information in this page is updated in accordance with firmware version **<u>RUTX_R_00.07.07.3</u>**.

Contents

- <u>1 Summary</u>
- <u>2 LAN</u>
- <u>3 Firewall</u>
- <u>4 Topology</u>

Summary

The **Network** page contains information related to the device's networking. This chapter is an overview of the Network page in RUTX10 devices.

If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Advanced" button, located at the top of the WebUI.

×

×

LAN

This tab displays information about the device's local network(s). The figure below is an example of the **Network** window:

	lan information	
Name	LAN interface name	
Address	IP address of the LAN interface	
Netmask	Netmask of the LAN interface. In a sense, a netmask specifies the size of a network. In other words, it indicates which part of the IP address denotes the network, and which denotes the device	
dhcp leases		
Interface	Interface which leased the address	
Hostname	Hostname of a LAN client	
IP Address	IP address of a LAN client	
MAC Address	MAC address of a LAN client	
Leasetime Remaining	Remaining lease time for a DHCP client. Active DHCP lease holders will try to renew their DHCP leases after a half of the lease time passes.	
Static Lease	This action will reserve currently assigned IP address for the device in Network -> Interfaces -> Static leases.	

Similarly there is an IPv6 dedicated tab.

×

lan information

Name	LAN interface name	
Address	IP address of the LAN interface	
Delegated prefix	The delegated prefix is a smaller subnet given to a device to lease IPv6 addresses for its own DHCPv6 clients.	
dhcp leases		
Interface	Interface which leased the address	
Hostname	Hostname of a LAN client	
Address	IP address of a LAN client	
Delegated prefix	The delegated prefix is a smaller subnet given to a device to lease IPv6 addresses for its own DHCPv6 clients.	
DUID	DHCP unique identifier is used by DHCPv6 to identify device. Similar to MAC that is used by DHCPv4.	
Leasetime Remaining	Remaining lease time for a DHCP client. Active DHCP lease holders will try to renew their DHCP leases after a half of the lease time passes.	
Static Lease	This action will reserve currently assigned IP address for the device in Network -> Interfaces -> Static leases.	

Firewall

This tab displays information about the device's firewall. Info is shown of IPv4 and IPv6 traffic. The figure below is an example of the **Firewall** page tables:



For more information about specific firewall chain, **INFO** button can be pressed. Window like this should pop up:



Topology

The **Topology** tab allows scanning of WAN, LAN or both interfaces via arp scan to check active connected devices. After scan it shows how many active devices were found and on which interface.

All active devices

This section displays the results of the scan.



field name

Hostname (Vendor) IP Address MAC Address Type Interface Hostname of scanned device IP address of scanned device MAC address of scanned device The type of connection The interface the scanned device is connected description