

# RUTX11 Side Widget

The information in this page is updated in accordance with firmware version [RUTX\\_R\\_00.07.07.2](#).

**Notice** that not all provided pictures can match the information on your device.



## Contents

- [1 Quick Settings](#)
- [2 Dual Sim](#)
- [3 System Status](#)
- [4 RMS Status](#)
- [5 Settings](#)
- [6 Overview page toggles](#)

## Quick Settings

---

The first set of quick buttons provides options to toggle various settings on or off, allowing users to customize their preferences with ease.



## Dual Sim

---

Dual sim widget



## System Status

---

The **System status** page contains information summaries about CPU, RAM, FLASH usages and router uptime.



On the top right corner is **Settings** button that transfers you to **Status System page**.

## RMS Status

---

RMS status widget



On the top right corner is **Settings** button that transfers you to **RMS page**.

## Settings

---

The last page is big **Settings** button that allows you quickly show or hide available settings.  
Available settings for **RUTX11** device:

Mobile status

System status

Wifi 2.4GHz status

Wifi 5GHz status

RMS status

## Overview page toggles

---

If the user is on the Status Overview page, a bonus widget will appear below the side widget arrow.  
This setting allows the user to toggle overview page widgets and hide certain information if preferred.

