


# RUTX12 SIM Card

[Main Page](#) > [RUTX Routers](#) > [RUTX12](#) > [RUTX12 Manual](#) > **RUTX12 SIM Card**

This chapter provides a description on how to correctly **insert a SIM card** into a RUTX12 device.

## SIM card insertion

- 1 Pull out the SIM needle from the front panel of the router.
- 2 Push the SIM holder button with the SIM needle.
- 3 Pull out the SIM holder. 
- 4 Insert your SIM card into the SIM holder.
- 5 Slide the SIM holder back into the router.

---

The device is compatible with **mini-SIM (2FF)** size cards. But since different types of SIM cards have the same contact arrangement, smaller SIM cards can also be used with the router, provided they are inserted into a **2FF SIM card adapter**. A size perspective of the most popular SIM card types can be seen in the figure below:



---

**Micro-SIM (3FF)** cards can be used with a 3FF to 2FF SIM card adapter such as this one:



---

**Nano-SIM (4FF)** cards can be used with a 4FF to 2FF SIM card adapter such as this one:



---

The measurements of the different SIM card types are as follows:

<b>SIM card format</b>	<b>Length (mm)</b>	<b>Width (mm)</b>	<b>Thickness (mm)</b>
Mini-SIM (2FF)	25.00	15.00	0.76
Micro-SIM (3FF)	15.00	12.00	0.76
Nano-SIM (4FF)	12.30	8.80	0.67