

RUTX12 Side Widget

The information in this page is updated in accordance with firmware version [RUTX_R_00.07.07.3](#).

Notice that not all provided pictures can match the information on your device.



Contents

- [1 Quick Settings](#)
- [2 Mobile Status Primary](#)
- [3 Mobile Status Secondary](#)
- [4 Wifi 2.4GHz](#)
- [5 Wifi 5GHz](#)
- [6 System Status](#)
- [7 RMS Status](#)
- [8 Settings](#)
- [9 Overview page toggles](#)

Quick Settings

The first set of quick buttons provides options to toggle various settings on or off, allowing users to customize their preferences with ease.



Mobile Status Primary



Mobile Status Secondary



Wifi 2.4GHz

Wifi 2.4GHz widget



On the top right corner is **Settings** button that transfers you to **Wifi 2.4GHz page**.

Wifi 5GHz

Wifi 5GHz widget



On the top right corner is **Settings** button that transfers you to **Wifi 5GHz page**.

System Status

The **System status** page contains information summaries about CPU, RAM, FLASH usages and router uptime.



On the top right corner is **Settings** button that transfers you to **Status System page**.

RMS Status

RMS status widget



On the top right corner is **Settings** button that transfers you to **RMS page**.

Settings

The last page is big **Settings** button that allows you quickly show or hide available settings. Available settings for **RUTX12** device:

Mobile Status (Primary)

Mobile Status (Secondary)

System status

Wifi 2.4GHz status

Wifi 5GHz status

RMS status

Overview page toggles

If the user is on the Status Overview page, a bonus widget will appear below the side widget arrow. This setting allows the user to toggle overview page widgets and hide certain information if preferred.

