

RUT FAQ

Redirect to:

- [FAQ](#)

- **Troubleshooting, debuging, router recovery**

- [RMA guidelines for networking devices](#)
- [My router went to „Safe mode“, what should I do?](#)
- [I entered the wrong password several \(5\) times and now I cannot reach the router's WebUI, what should I do?](#)
- [Port forwarding does not work, what should I do?](#)
- [How to download and upload a backup file?](#)
- [How can I restart a router that can't be accessed remotely via the Internet?](#)
- [Settings deleted after reboot](#)
- [Bootloader menu](#)
- [When upgrading Firmware router returns error "Firmware image size is too large"](#)
- [Mobile data connection troubleshooting](#)

- **Router control and configuration**

- [How to use SMS commands?](#)
- [How to limit the router's internet speed?](#)
- [How to limit internet speeds for specific Wi-Fi users?](#)
- [How can I block specific websites so that clients would not be able to access them?](#)
- [How to login via SSH using an RSA key?](#)
- [Can WAN port be used as LAN?](#)
- [How to disable mobile data?](#)
- [Can I send GPS data to my server?](#)
- [How to disable LAN ports?](#)
- [How to upload and download files from the router \(Linux\)?](#)
- [How to upload and download files from the router \(Windows\)?](#)
- [How to execute dialling codes?](#)
- [802.11e WMM](#)
- [Input/Output control and monitoring via CLI](#)
- [How to configure Auto APN?](#)
- [Ignoring Firewall and letting all traffic go through the router](#)
- [Basic CLI / SSH Commands for RUT devices](#)
- [Custom package upload via Package Manager](#)

- **Remote access**

- [RMS related questions](#)
- [How can I access my router remotely through the WAN interface?](#)
- [How to enable remote access on the router?](#)
- [How to access the router remotely via browser without the use of a Public IP?](#)
- [How can I configure port forwarding on my router?](#)
- [My router has a Dynamic Public IP address. How can I reach it via the Internet without checking what IP address it is currently using?](#)

- **General questions about RUTxxx routers**
 - [Where can I find firmwares for old devices?](#)
 - [Can I use routers in a vehicle?](#)
 - [What OS do RUT routers use?](#)
 - [Can I use LTE/3G/Wi-Fi antennas other than Teltonika's?](#)
 - [Where are MAIN and AUX LTE antenna connectors on RUT9XX and RUT240?](#)
 - [Can RUT routers be powered by solar batteries?](#)
 - [Passive Power over Ethernet \(PoE\)](#)
 - [Can both SIM cards be active at the same time in RUT9XX series routers?](#)
 - [Inputs/Outputs on Teltonika routers](#)
 - [Web Filter doesn't work](#)
 - [PDF Manuals](#)
 - [What is the correct tightening torque of the SMA connectors?](#)
- **General questions about gateways**
 - [Is there a way to route from device connected through USB interface to device connected through Ethernet port on TRB140?](#)
- **General networking questions**
 - [Mobile Signal Strength Recommendations](#)
 - [Private and Public IP Addresses](#)
 - [What is a Netmask?](#)
 - [Network Address Translation](#)
 - [Where can I get TLS certificates?](#)
- **Router information**
 - [Frequency bands supported by Networking devices](#)
 - [RUT955 GPS protocols](#)
 - [RUT850 GPS protocols](#)
 - [What is the maximum range of the wireless signal on RUT devices?](#)
 - [Power consumption of RUT230](#)
 - [Power consumption of RUT240](#)
 - [Power consumption of RUT850](#)
 - [Power consumption of RUT900](#)
 - [Power consumption of RUT950](#)
 - [Power consumption of RUT955](#)
 - [Power consumption of TRB140](#)
 - [Power consumption of TRB142](#)
 - [Power consumption of TRB145](#)
 - [Power consumption of TRM240](#)
 - [Power consumption of TRM250](#)
 - [Spatial measurements for product accessories](#)
- **Security**
 - [Security guidelines](#)