



## **AT+IPR Set TE-TA Fixed Local Rate**

---

The commands used to query and set the baud rate of the UART. The default baud rate value (**<rate>**) is 115200bps. The setting of **<rate>** will not be restored with **AT&F**.

## **AT+QRIR Restore RI Behavior to Inactive**

---

If the RI (ring indicator) behavior is "always", it can be restored to inactive by the Execution Command. The RI behavior is controlled by **AT+QCFG**. Please refer to **AT+QCFG="urc/ri/ring"**, **AT+QCFG="urc/ri/sms incoming"** and **AT+QCFG="urc/ri/other"** for more details.