

# Serial Interface Control Commands TRM250

[Main Page](#) > [TRM Modems](#) > [TRM250](#) > [TRM250 Manual](#) > [TRM250 AT Commands](#) > **Serial Interface Control Commands TRM250**



## Contents

- [1 Serial Interface Control Commands](#)
  - [1.1 AT&C Set DCD Function Mode](#)
  - [1.2 AT&D Set DTR Function Mode](#)
  - [1.3 AT+IFC Set TE-TA Local Data Flow Control](#)
  - [1.4 Set TE-TA Control Character Framing](#)
  - [1.5 AT+IPR Set TE-TA Fixed Local Rate](#)
  - [1.6 AT+QRIR\\* Restore RI Behavior to Inactive](#)

## Serial Interface Control Commands

### [AT&C Set DCD Function Mode](#)

---

The command controls the behavior of the UE's DCD line.

### [AT&D Set DTR Function Mode](#)

---

The command determines how the UE responds if DTR line is changed from low to high level during data mode.

### [AT+IFC Set TE-TA Local Data Flow Control](#)

---

The command determines the flow control behavior of the serial port.

### [Set TE-TA Control Character Framing](#)

---

The command determines the serial interface character framing format and parity received by TA from TE.

### [AT+IPR Set TE-TA Fixed Local Rate](#)

---

The command is used to query and set the baud rate of the UART. The default baud rate value (**<rate>**) is 115200bps. The setting of **<rate>** will not be restored with **AT&F**.

### **AT+QRIR\* Restore RI Behavior to Inactive**

---

If the RI (ring indicator) behavior is "always", it can be restored to inactive by the Execution Command. The RI behavior is controlled by **AT+QCFG\***. Please refer to **AT+QCFG="urc/ri/ring"**, **AT+QCFG="urc/ri/smsincoming"**, and **AT+QCFG="urc/ri/other"** for more details.