

# Shell Commands

[Main Page](#) > [FAQ](#) > [Control & Configuration](#) > **Shell Commands**



## Contents

- [1 Summary](#)
- [2 Command table](#)
- [3 Examples](#)
  - [3.1 File commands](#)
  - [3.2 Process management commands](#)
  - [3.3 System commands](#)
  - [3.4 Installation commands](#)
  - [3.5 Networking commands](#)
  - [3.6 Search commands](#)
  - [3.7 Piping commands](#)

## Summary

In this topic we will cover the basic CLI / SSH commands for beginners. It will help users manage and troubleshoot RUTxxx, RUTXXX, TRB14X devices.

Note: With almost every command, '--help' option shows usage summary for that command. The commands have the following syntax:

*\$command options arguments*

## Command table

This section provides a list of basic CLI / SSH commands and options.

### CLI commands

Command	Syntax	Description
<b>File commands</b>		
<b>pwd</b>	<code>pwd</code>	Show current working directory.
<b>cd</b>	<code>cd &lt;/path-to-directory&gt;</code>	Change the current working directory to the directory provided as argument. If no argument is given to <code>cd</code> , it changes the directory to the user's home directory.
<b>ls</b>	<code>ls &lt;files-or-directories&gt;</code>	List files or directories. Example: <code>ls /etc/config/</code>
<b>mkdir</b>	<code>mkdir &lt;dir1&gt;</code>	Creating a directory "dir1".
<b>touch</b>	<code>touch &lt;file1&gt;</code>	Create empty file "file1".
<b>cp</b>	<code>cp &lt;file1&gt; &lt;file2&gt;</code>	Copy the contents of "file1" to "file2".
<b>cp -r</b>	<code>cp -r &lt;dir1&gt; &lt;dir2&gt;</code>	Copy "dir1" to "dir2"; creates "dir2" if not present.
<b>mv</b>	<code>mv &lt;file1&gt; &lt;file2&gt;</code>	Move files or directories.
<b>rm</b>	<code>rm &lt;file1&gt;</code>	Deleting the file "file1".
<b>rm -r</b>	<code>rm -r &lt;dir1&gt;</code>	Deleting the directory "dir1".
<b>cat</b>	<code>cat &lt;file1&gt;</code>	To view the contents of a "file1". Example: <code>cat /etc/config/system</code>
<b>vi</b>	<code>vi &lt;file1&gt;</code>	Open a file with vi for editing. Press 'i', to enter INSERT mode, and start editing file. Press Esc to exit INSERT mode. Press 'x' and 'Enter'. Changes will be saved.
<b>Search commands</b>		
<b>grep</b>	<code>grep &lt;pattern&gt; &lt;file&gt;</code>	The <code>grep</code> command searches for a pattern in a file. Example to grep only version info from system file: <code>grep version /etc/config/system</code>
<b>find</b>	<code>find &lt;path&gt; -name &lt;"pattern"&gt;</code>	Find files or directories in specified directory that start with "pattern". Example: <code>find / -name "modbus"</code>
<b>Piping commands</b>		
<b> </b>	<code>&lt;command1&gt;   &lt;command2&gt; ...</code>	Pipe is a command that lets you use two or more commands such that output of one command serves as input to the next. Example, how to see only dhcp info from logread file: <code>logread  grep dhcp</code>
<b>Process commands</b>		
<b>ps</b>	<code>ps</code>	Show the currently working processes.
<b>kill</b>	<code>kill &lt;pid&gt;</code>	Kill the process with given pid. Pid - is process ID, you can see it executing <code>ps</code> command. Kill -9 <pid> - force kill process pid.
<b>top</b>	<code>top</code>	Display all running process.
<b>free</b>	<code>free -h</code>	Command is used to display amount of free and used RAM in the system, also prints the swap space stats.
<b>System commands</b>		

<b>df</b>	df -h	Show the disk usage.
<b>uname</b>	uname -a	Show kernel information.
-	cat /proc/cpuinfo	CPU information.
-	cat /proc/version	CPU version.
<b>Network commands</b>		
<b>ping</b>	ping <host>	Ping host and output results. Example: <i>ping 8.8.8.8</i>
<b>route</b>	route -n	To see IP routing tables.
<b>traceroute</b>	traceroute <domain>	Displaying the route (path) and measuring transit delays of packets takes to destination. Example: <i>traceroute teltonika-networks.com</i>
<b>tcpdump</b>	tcpdump <option1> <option2> ...	To display packets being transmitted or received over a network interface. Example: <i>tcpdump -n port 80 -I eth0</i>
<b>netstat</b>	netstat <option1> <option2> ...	The <i>netstat</i> is a command used to check the network statistics of the system. It delivers basic statistics on all network activities and informs users on which ports and addresses the corresponding connections (TCP, UDP) are running and which ports are open for tasks.
-	ip route  grep default	To view default gateway.
-	cat /tmp/resolv.conf.auto	To view DNS address.
<b>ifconfig</b>	ifconfig	Displays the status of the system's active interfaces.
-	/etc/init.d/<script name>	Start/stop/restart running scripts. Example: <i>/etc/init.d/firewall restart</i>
<b>iperf3</b>	iperf <-s> -c host <options>	It is a tool to measure the bandwidth and the quality of a network link. It is additional package. First it should be installed on device: <i>opkg install iperf3</i> Syntax examples for server: <i>iperf3 -s -p 5000</i> ; for client: <i>iperf3 -c IPADDRESS -p 5000 -t 10</i>
<b>Installation commands</b>		
<b>opkg</b>	opkg <options> sub-command <arguments>	The opkg utility is the lightweight package manager used for downloading and installing pre-made packages from package repositories. See examples on: <a href="#">Installation_commands</a>
<b>Extra commands</b>		
<b>gsmctl</b>	gsmctl	Can request information from or perform operations on a router's module. More information on Teltonika wiki: <a href="#">Gsmctl_commands</a>
<b>reboot</b>	reboot	To reboot the device immediately.
<b>logread</b>	logread -f	Show log output on screen. Example: <i>logread -f  grep DHCP</i>

# Examples

## File commands

---

1. **pwd** command shows current working directory:

```
...
root@Teltonika:~# pwd
/root
...
```

2. **cd** command is used to change the current working directory to the directory provided as argument.

Example: when you're on your Home directory, you need to go to the /etc/config directory, use **cd /etc/config**:

```
...
root@Teltonika:~# cd /etc/config/
root@Teltonika:/etc/config#
```

3. **ls** command is used to list files or directories.

Example: use **ls /etc/config** to list contents of the "/etc/config" folder:

```
...
root@Teltonika:~# ls /etc/config/
auto_update          events_reporting      load_balancing        multiwan
pptpd                rpcd                  stunnel
blocklist            eventslog_report     logtrigger          network
privoxy              rut_fota             system
call_utils           firewall            luci
                                         system
                                         luci
                                         ntpclient
```

```

profiles          sim_idle_protection
cli              fstab
qos              sim_switch
coovachilli     gps
quagga          simcard
data_limit       hostblock
racoon           smpp_config
ddns             hotspot_scheduler
output_control   radius
ddos             hwinfo
reregister      sms_utils
dhcp              ioman
periodic_reboot rms_connect_mqtt
dropbear          kmod_man
rms_connect_timer static_arp
etherwake        landingpage
rms_mqtt         strongswan
...

```

---

#### 4. **mkdir** command is used to create a directory.

Example: use **mkdir /etc/Example\_dir** to make a new directory named "Example\_dir":

```

...
root@Teltonika:~# mkdir /etc/Example_dir
root@Teltonika:~# ls /etc/
Example_dir          chilli.conf          fstab          ipsec.d
package_restore.sh  rc.common           stunnel
...

```

---

#### 5. **touch** command is used to create empty file.

Example: use **touch /etc/Example\_dir/Example\_file1.txt** to create a blank txt file under the "/etc/Example\_dir" directory:

```

...
root@Teltonika:~# touch /etc/Example_dir/Example_file1.txt
root@Teltonika:~# ls /etc/Example_dir/
Example_file1.txt
...

```

---

#### 6. **cat** command is used to get inside contents of a file.

Example: use **cat /etc/config/ping\_reboot** to get the inside contents of "ping\_reboot" file in your screen:

```

...

```

```
root@Teltonika:~# cat /etc/config/ping_reboot
config ping_reboot
    option enable '0'
    option action '1'
    option time '5'
    option host '8.8.8.8'
    option retry '2'
    option fail_counter '0'
    option packet_size '56'
    option time_out '5'
    option interface '1'
    option stop_action '0'

...
```

---

7. **cp** command is used to copy the contents of "file1" to "file2".

Example: use **cp Example\_file1.txt Example\_file2.txt**, to copy content of file "Example\_file1.txt" to "Example\_file2.txt":

```
...
root@Teltonika:/etc/Example_dir# cp Example_file1.txt Example_file2.txt
root@Teltonika:/etc/Example_dir# ls
Example_file1.txt  Example_file2.txt
root@Teltonika:/etc/Example_dir# cat Example_file2.txt
"Sample text !!!"
...
```

---

8. **cp -r** command is used to copy "dir1" to "dir2"; creates "dir2" if not present.

Example: use **cp -r Example\_dir Example\_dir2**, to copy directory "Example\_dir":

```
...
root@Teltonika:/etc# cp -r Example_dir Example_dir2
root@Teltonika:/etc# ls
Example_dir          chilli                  freeradius2           ipsec.conf
opkg.conf            rc.button               fstab                 ipsec.d
Example_dir2         chilli.conf             stunnel
package_restore.sh   rc.common
```

---

9. **rm** command is used to delete the file.

Example: use **rm /etc/Example\_dir2/Example\_file1.txt**, to delete file "Example\_file1":

```
...
root@Teltonika:~# rm /etc/Example_dir2/Example_file1.txt
root@Teltonika:~# ls /etc/Example_dir2/
```

Example\_file2.txt

...

---

10. **rm -r** command is used delete the directory.

Example: use **rm -r /etc/Example\_dir**, to delete directory "Example\_dir":

...

```
root@Teltonika:~# rm -r /etc/Example_dir
root@Teltonika:~# ls /etc/
Example_dir2          chilli.conf          fstab          ipsec.d
package_restore.sh    rc.common           stunnel
```

...

---

11. **mv** command is used to move files or directories.

Example: use **mv /etc/Example\_new /etc/Example\_dir2/**, to move directory "Example\_new" to directory "Example\_dir2":

...

```
root@Teltonika:~# mv /etc/Example_new /etc/Example_dir2/
root@Teltonika:~# ls /etc/Example_dir2/
Example_new
...
```

---

12. **vi** command is used to edit files.

Example: use **vi /etc/Example\_dir2/Example\_file2.txt**, to edit file "Example\_file2.txt". Press 'i', to enter INSERT mode, it will let you edit. Press Esc to exit INSERT mode. Press ':x' and 'Enter' to save changes:

...

```
root@Teltonika:~# vi /etc/Example_dir2/Example_file2.txt
...
```

---

## Process management commands

1. **ps** command shows the currently working processes:

...

```
root@Teltonika:~# ps
PID USER      VSZ STAT COMMAND
 1 root       1596 S    /sbin/procd
```

```
2 root      0 SW    [kthreadd]
3 root      0 SW    [ksoftirqd/0]
5 root      0 SW<  [kworker/0:0H]
7 root      0 SW<  [khelper]
28 root     0 SW<  [writeback]
29 root     0 SW<  [bioset]
30 root     0 SW<  [kblockd]
31 root     0 SW    [kworker/0:1]
32 root     0 SW    [kswapd0]
33 root     0 SW    [fsnotify_mark]
35 root     0 SW    [spi0]
254 root    0 SW<  [deferwq]
329 root    0 SWN   [jffs2_gcd_mtd5]
494 root    1244 S  /sbin/ubusd
570 root    0 SW<  [ipv6_addrconf]
...

```

---

## 2. **kill** command is used to kill the process with given pid.

Example, use **kill 570** to stop process ID - 570 [ipv6\_addrconf]

```
...
root@Teltonika:~# kill 570
...
```

---

## 3. **top** command shows all running process:

```
...
root@Teltonika:~# top
Mem: 49948K used, 11068K free, 188K shrd, 6764K buff, 16836K cached
CPU:  0% usr   9% sys   0% nic  81% idle   0% io    0% irq   9% sirq
Load average: 0.02 0.06 0.07 1/59 19825
PID  PPID USER      STAT  VSZ %VSZ %CPU COMMAND
19825 13212 root      R    1524  2%  9% top
 5989    1 root      S    7572 12%  0% /usr/sbin/rms_mqtt
 4466    1 root      S    7088 12%  0% /usr/bin/mwan
 3862    1 root      S    4400  7%  0% /usr/bin/mdcollectd start
 2102    1 root      S    4260  7%  0% /usr/sbin/uhttpd -f -h /www -r
Teltonika -x /cgi-bin -u /ubus -t 600 -T 30 -k 20 -A 1 -n 3 -N 100
 5376    1 root      S    4024  7%  0% /usr/sbin/openvpn --syslog
openvpn(client_cln) --cd /var/etc --config openvpn-client_cln.conf
 1594    1 root      S    3056  5%  0% /usr/sbin/gsmd -p /dev/modem_cmd -s
115200 -m auto
 1466    1 root      S    2504  4%  0% /usr/bin/eventslogd
 1035    1 root      S    2132  3%  0% /sbin/rpcd
 3902    1 root      S    2036  3%  0% /usr/sbin/port_event_checker
 3021    1 root      S    2004  3%  0% /usr/sbin/wpa_supplicant -B -s -P
/var/run/wpa_supplicant-wlan0.pid -D nl80211 -i wlan0
```

```
2910      1 root      S    1996   3%  0% /usr/sbin/hostapd -s -P  
/var/run/wifi phy0.pid -B /var/run/hostapd-phy0.conf  
1279      1 root      S    1784   3%  0% /sbin/netifd  
     0 root      S    1596   3%  0% /sbin/procd  
4035      1 root      S    1580   3%  0% /bin/sh /sbin/fix_sta_ap.sh  
...
```

---

4. **free -h** command is used to display amount of free and used RAM in the system, also prints the swap space stats:

```
...  
root@Teltonika:~# free -h  
total        used         free        shared       buff/cache  
available  
Mem:      61016          26992        10420          188        23604  
34964  
Swap:          0           0           0  
...
```

---

## System commands

---

1. **df -h** command shows the disk space usage:

```
...  
root@Teltonika:~# df -h  
Filesystem      Size  Used Available Use% Mounted on  
rootfs          2.4M  640.0K    1.8M  26% /  
/dev/root       11.8M  11.8M      0 100% /rom  
tmpfs           29.8M  188.0K   29.6M   1% /tmp  
/dev/mtdblock5   2.4M  640.0K    1.8M  26% /overlay  
overlayfs:/overlay  2.4M  640.0K    1.8M  26% /  
tmpfs            512.0K     0    512.0K   0% /dev  
/dev/mtdblock7    576.0K  336.0K   240.0K  58% /mnt/mtdblock7  
...
```

---

2. **uname -a** command shows kernel information:

```
...  
root@Teltonika:~# uname -a  
Linux Teltonika 3.18.44 #1 Tue Mar 24 13:53:40 UTC 2020 mips GNU/Linux  
...
```

---

3. **cat /proc/cpuinfo** command shows CPU information:

```
...
root@Teltonika:~# cat /proc/cpuinfo
system type          : Atheros AR9330 rev 1
machine              : Teltonika RUT200
processor             : 0
cpu model             : MIPS 24Kc V7.4
BogoMIPS              : 265.42
wait instruction      : yes
microsecond timers    : yes
tlb_entries           : 16
extra interrupt vector: yes
hardware watchpoint   : yes, count: 4, address/irw mask: [0x0ffc, 0x0ffc,
0x0ffb, 0x0ffb]
isa                   : mips1 mips2 mips32r1 mips32r2
ASEs implemented       : mips16
shadow register sets  : 1
kscratch registers     : 0
package               : 0
core                  : 0
VCED exceptions        : not available
VCEI exceptions        : not available
...
...
```

---

4. **cat /proc/version** command shows CPU version:

```
...
root@Teltonika:~# cat /proc/version
Linux version 3.18.44 (app@runner-DsCEGNRx-project-7-concurrent-0) (gcc
version 4.8.3 (OpenWrt/Linaro GCC 4.8-2014.04 unknown) ) #1
...
...
```

---

## Installation commands

---

The opkg utility is the lightweight package manager used for downloading and installing pre-made packages from package repositories. For more information visit:

<https://openwrt.org/docs/guide-user/additional-software/opkg>

---

1. **opkg update** command updates list of available packages:

```
...
root@Teltonika:~# opkg update
Downloading
```

```
http://downloads.openwrt.org/chaos_calmer/15.05.1/ar71xx/generic/packages/base/Packages.gz.  
Updated list of available packages in /var/opkg-lists/chaos_calmer_base.  
Downloading  
http://downloads.openwrt.org/chaos_calmer/15.05.1/ar71xx/generic/packages/packages/Packages.gz.  
Updated list of available packages in /var/opkg-lists/chaos_calmer_packages.  
Downloading  
http://downloads.openwrt.org/chaos_calmer/15.05.1/ar71xx/generic/packages/luci/Packages.gz.  
Updated list of available packages in /var/opkg-lists/chaos_calmer_luci.  
...  
...
```

---

## 2. **opkg list** command lists available packages.

Example: use **opkg list |grep iperf3** to list tool "iperf3" info:

```
...  
root@Teltonika:~# opkg list |grep iperf3  
iperf3 - 3.0.11-1 - Iperf is a modern alternative for measuring TCP and UDP  
bandwidth performance, allowing the tuning of various parameters.  
...
```

---

## 3. **opkg install <package name>** command installs packages.

Example: use **opkg install iperf3** to install package "iperf3":

```
...  
root@Teltonika:~# opkg install iperf3  
Installing iperf3 (3.0.11-1) to root...  
Downloading  
http://downloads.openwrt.org/chaos_calmer/15.05.1/ar71xx/generic/packages/base/iperf3_3.0.11-1_ar71xx.ipk.  
Configuring iperf3.  
...
```

---

## 4. **opkg upgrade <package name>** command upgrades packages.

Example: use **opkg upgrade iperf3** to upgrade package "iperf3":

```
...  
root@Teltonika:~# opkg upgrade iperf3  
Installing iperf3 (3.0.11-1) to root...  
Downloading  
http://downloads.openwrt.org/chaos_calmer/15.05.1/ar71xx/generic/packages/base/iperf3_3.0.11-1_ar71xx.ipk.  
Configuring iperf3.
```

3. **opkg remove <package name>** command removes packages.

Example: use **opkg remove iperf3** to remove package "iperf3":

```
...  
root@Teltonika:~# opkg remove iperf3  
Removing package iperf3 from root...
```

---

## Networking commands

---

1. **ifconfig** command shows all network interface information. Some basic use could be like checking which network interfaces are connected and their respective MAC or IP address.

Example: use **ifconfig** to see network interfaces:

```
...  
root@Teltonika:~# ifconfig  
br-lan      Link encap:Ethernet  HWaddr 00:1E:42:26:2B:F0  
            inet addr:192.168.1.1  Bcast:192.168.1.255  Mask:255.255.255.0  
            inet6 addr: fe80::21e:42ff:fe26:2bf0/64 Scope:Link  
              UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1  
              RX packets:3726 errors:0 dropped:0 overruns:0 frame:0  
              TX packets:2924 errors:0 dropped:0 overruns:0 carrier:0  
              collisions:0 txqueuelen:0  
              RX bytes:451598 (441.0 KiB)  TX bytes:991568 (968.3 KiB)  
eth0        Link encap:Ethernet  HWaddr 00:1E:42:26:2B:F0  
            UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1  
            RX packets:3737 errors:0 dropped:11 overruns:0 frame:0  
            TX packets:2917 errors:0 dropped:0 overruns:0 carrier:0  
            collisions:0 txqueuelen:1000  
            RX bytes:504422 (492.5 KiB)  TX bytes:990758 (967.5 KiB)  
            Interrupt:5  
lo          Link encap:Local Loopback  
            inet addr:127.0.0.1  Mask:255.0.0.0  
            inet6 addr: ::1/128 Scope:Host  
              UP LOOPBACK RUNNING  MTU:65536  Metric:1  
              RX packets:76 errors:0 dropped:0 overruns:0 frame:0  
              TX packets:76 errors:0 dropped:0 overruns:0 carrier:0  
              collisions:0 txqueuelen:0  
              RX bytes:6963 (6.7 KiB)  TX bytes:6963 (6.7 KiB)  
wlan0       Link encap:Ethernet  HWaddr 00:1E:42:26:2B:F2  
            inet addr:192.168.88.197  Bcast:192.168.88.255  Mask:255.255.255.0  
            inet6 addr: fe80::21e:42ff:fe26:2bf2/64 Scope:Link
```

```
UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
RX packets:34007 errors:0 dropped:146 overruns:0 frame:0
TX packets:4360 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:0
RX bytes:5610523 (5.3 MiB) TX bytes:523881 (511.6 KiB)
wlan0-1 Link encap:Ethernet HWaddr 02:1E:42:26:2B:F2
inet6 addr: fe80::1e:42ff:fe26:2bf2/64 Scope:Link
UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
RX packets:0 errors:0 dropped:0 overruns:0 frame:0
TX packets:728 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:0
RX bytes:0 (0.0 B) TX bytes:239145 (233.5 KiB)
wwan0 Link encap:Ethernet HWaddr 12:2A:38:D0:1D:21
inet6 addr: fe80::102a:38ff:fed0:1d21/64 Scope:Link
UP BROADCAST RUNNING NOARP MULTICAST MTU:1500 Metric:1
RX packets:0 errors:0 dropped:0 overruns:0 frame:0
TX packets:1494 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:1000
RX bytes:0 (0.0 B) TX bytes:55434 (54.1 KiB)
...

```

---

## 2. **ip route |grep default** command used to view default gateway:

```
...
root@Teltonika:~# ip route |grep default
default via 84.15.163.16 dev wwan0 metric 1
...
```

---

## 3. **cat /tmp/resolv.conf.auto** command used to view DNS addresses:

```
...
root@Teltonika:~# cat /tmp/resolv.conf.auto
# Interface ppp_4
nameserver 213.226.131.131
nameserver 193.219.88.36
...
```

---

## 4. **ping** command used to test connectivity between hosts:

Use **ping** to see all options:

```
...
root@Teltonika:~# ping
BusyBox v1.30.1 () multi-call binary.
Usage: ping [OPTIONS] HOST
Send ICMP ECHO_REQUEST packets to network hosts
```

```

-4, -6          Force IP or IPv6 name resolution
-c CNT          Send only CNT pings
-s SIZE         Send SIZE data bytes in packets (default 56)
-i SECS         Interval
-A              Ping as soon as reply is received
-t TTL          Set TTL
-I IFACE/IP    Source interface or IP address
-W SEC          Seconds to wait for the first response (default 10)
                (after all -c CNT packets are sent)
-w SEC          Seconds until ping exits (default:infinite)
                (can exit earlier with -c CNT)
-q              Quiet, only display output at start
                and when finished
-p HEXBYTE     Pattern to use for payload
...

```

Example: use **ping -I 192.168.1.1 192.168.1.111** to ping host 192.168.1.111 from LAN interface 192.168.1.1:

```

...
root@Teltonika:~# ping -I 192.168.1.1 192.168.1.111
PING 192.168.1.111 (192.168.1.111) from 192.168.1.1: 56 data bytes
64 bytes from 192.168.1.111: seq=0 ttl=128 time=0.893 ms
64 bytes from 192.168.1.111: seq=1 ttl=128 time=0.839 ms
64 bytes from 192.168.1.111: seq=2 ttl=128 time=1.067 ms
64 bytes from 192.168.1.111: seq=3 ttl=128 time=0.781 ms
...

```

---

## 5. **route** command used to see IP routing tables.

Example: use **route -n** to see routing tables and don't resolve names:

```

...
root@Teltonika:~# route -n
Kernel IP routing table
Destination      Gateway        Genmask        Flags Metric Ref  Use Iface
0.0.0.0          84.15.163.16   0.0.0.0        UG    1      0      0 wwan0
84.15.163.0      0.0.0.0        255.255.255.224 U      0      0      0 wwan0
84.15.163.16    0.0.0.0        255.255.255.255 UH    0      0      0 wwan0
192.168.1.0      0.0.0.0        255.255.255.0   U      0      0      0 br-
lan
...

```

---

## 6. **traceroute** command used to view the route (path) and measuring transit delays of packets takes to destination.

Use **traceroute** to see all options:

```
...
root@Teltonika:~# traceroute
BusyBox v1.30.1 () multi-call binary.
Usage: traceroute [-FIlnrv] [-f 1ST_TTL] [-m MAXTTL] [-q PROBES] [-p PORT]
                 [-t TOS] [-w WAIT_SEC] [-s SRC_IP] [-i IFACE]
                 [-z PAUSE_MSEC] HOST [BYTES]
Trace the route to HOST

      -F      Set don't fragment bit
      -l      Display TTL value of the returned packet
      -n      Print numeric addresses
      -r      Bypass routing tables, send directly to HOST
      -v      Verbose
      -f N    First number of hops (default 1)
      -m N    Max number of hops
      -q N    Number of probes per hop (default 3)
      -p N    Base UDP port number used in probes
              (default 33434)
      -s IP   Source address
      -i IFACE Source interface
      -t N    Type-of-service in probe packets (default 0)
      -w SEC  Time to wait for a response (default 3)
      -g IP   Loose source route gateway (8 max)

...
```

Example: use **traceroute teltonika-networks.com -n** to see path to destination teltonika-networks.com:

```
...
root@Teltonika:~# traceroute teltonika-networks.com -n
traceroute to teltonika-networks.com (13.32.43.40), 30 hops max, 38 byte
packets
1 * * *
2 10.225.72.9  48.441 ms  28.459 ms  40.557 ms
3 10.224.72.9  28.655 ms  27.577 ms  24.268 ms
4 10.224.72.20 26.963 ms  28.636 ms  28.579 ms
5 84.15.10.245 33.991 ms  27.176 ms  39.612 ms
6 213.252.227.173 28.585 ms  29.742 ms  213.252.224.217 33.504 ms
7 213.252.227.250 28.838 ms  213.252.224.250 33.806 ms  213.252.227.250
27.663 ms
8 213.252.224.254 28.347 ms  34.179 ms  28.548 ms
...
```

---

7. **tcpdump** is command-line packets sniffer tool which is used to capture or filter TCP/IP packets that received or transferred over a network on a specific interface.

Use **tcpdump -h** to see all options:

```
...
root@Teltonika:~# tcpdump -h
```

```
tcpdump version 4.9.2
libpcap version 1.8.1
Usage: tcpdump [ -aAbdDefhHIJKlLnNOpqStuUvxX# ] [ -B size ] [ -c count ]
        [ -C file_size ] [ -E algo:secret ] [ -F file ] [ -G seconds ]
        [ -i interface ] [ -j tstamptype ] [ -M secret ] [ --number ]
        [ -Q in|out|inout ]
        [ -r file ] [ -s snaplen ] [ --time-stamp-precision precision
]
        [ --immediate-mode ] [ -T type ] [ --version ] [ -V file ]
        [ -w file ] [ -W filecount ] [ -y datalinktype ] [ -z
postrotate-command ]
        [ -Z user ] [ expression ]
...

```

Example: use **tcpdump -D** to display available interfaces:

```
...
root@Teltonika:~# tcpdump -D
1.eth0 [Up, Running]
2.wwan0 [Up, Running]
3.br-lan [Up, Running]
4.wlan0 [Up, Running]
5.any (Pseudo-device that captures on all interfaces) [Up, Running]
6.lo [Up, Running, Loopback]
...

```

Example: use **tcpdump -n -i wwan0** to capture IP address packets from mobile interface:

```
...
root@Teltonika:~# tcpdump -n -i wwan0
tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on wwan0, link-type EN10MB (Ethernet), capture size 262144 bytes
16:40:16.620564 IP 41.36.236.201.56037 > 84.15.163.15.23: Flags [S], seq
1410310927, win 33462, length 0
16:40:16.620887 IP 84.15.163.15.23 > 41.36.236.201.56037: Flags [R.], seq 0,
ack 1410310928, win 0, length 0
16:40:19.732046 IP 84.15.163.15 > 8.8.4.4: ICMP echo request, id 522, seq 0,
length 17
16:40:19.795429 IP 8.8.4.4 > 84.15.163.15: ICMP echo reply, id 522, seq 0,
length 17
16:40:24.796440 IP 84.15.163.15 > 8.8.4.4: ICMP echo request, id 523, seq 0,
length 17
16:40:24.863184 IP 8.8.4.4 > 84.15.163.15: ICMP echo reply, id 523, seq 0,
length 17
...

```

Example: use **tcpdump host 192.168.1.111 and icmp -i any -n** to capture only icmp packets from 192.168.1.111 on any interface:

```
...
root@Teltonika:~# tcpdump host 192.168.1.111 and icmp -i any -n
tcpdump: verbose output suppressed, use -v or -vv for full protocol decode

```

```
listening on any, link-type LINUX_SLL (Linux cooked), capture size 262144
bytes
16:42:46.122094 IP 192.168.1.111 > 192.168.1.1: ICMP echo request, id 1, seq
48, length 40
16:42:46.122142 IP 192.168.1.111 > 192.168.1.1: ICMP echo request, id 1, seq
48, length 40
16:42:46.122458 IP 192.168.1.1 > 192.168.1.111: ICMP echo reply, id 1, seq
48, length 40
16:42:46.122493 IP 192.168.1.1 > 192.168.1.111: ICMP echo reply, id 1, seq
48, length 40
...
...
```

---

## 8. **netstat [-ral] [-tuwx] [-enWp]** command used to check the network statistics.

Example: use **netstat -h** to see all options:

```
...
root@Teltonika:~# netstat -h
netstat: invalid option -- h
BusyBox v1.30.1 () multi-call binary.
Usage: netstat [-ral] [-tuwx] [-enWp]
Display networking information
    -r      Routing table
    -a      All sockets
    -l      Listening sockets
            Else: connected sockets
    -t      TCP sockets
    -u      UDP sockets
    -w      Raw sockets
    -x      Unix sockets
            Else: all socket types
    -e      Other/more information
    -n      Don't resolve names
    -W      Wide display
    -p      Show PID/program name for sockets
...
...
```

Example: use **netstat -n -p -t** to see established connection for TCP socket, not resolving names and showing PID/program:

```
...
root@Teltonika:~# netstat -n -p -t
Active Internet connections (w/o servers)
Proto Recv-Q Send-Q Local Address          Foreign Address        State
PID/Program name
tcp      0      0 192.168.1.1:22          192.168.1.111:55826
ESTABLISHED 13199/dropbear
tcp      0      0 192.168.1.1:22          192.168.1.111:55824
ESTABLISHED 13169/dropbear
tcp      0      0 84.15.163.15:56982     18.196.62.30:15010
```

ESTABLISHED 5989/rms\_mqtt

■ ■ ■

9. **iperf3** is a tool to measure the bandwidth and the quality of a network link.

First it should be installed on device. Use command **opkg install iperf3**:

```
...
root@Teltonika:~# opkg install iperf3
Installing iperf3 (3.0.11-1) to root...
Downloading
http://downloads.openwrt.org/chaos_calmer/15.05.1/ar71xx/generic/packages/base/iperf3_3.0.11-1_ar71xx.ipk.
Configuring iperf3.
...

```

Use **iperf3 -h** to see all options:

```

-P, --parallel #           number of parallel client streams to run
-R, --reverse          run in reverse mode (server sends, client
receives)
-W, --window #[KMG]     set window size / socket buffer size
-C, --linux-congestion <algo> set TCP congestion control algorithm (Linux
only)
-M, --set-mss #          set TCP maximum segment size (MTU - 40 bytes)
-N, --nodelay            set TCP no delay, disabling Nagle's Algorithm
-4, --version4           only use IPv4
-6, --version6           only use IPv6
-S, --tos N              set the IP 'type of service'
-L, --flowlabel N        set the IPv6 flow label (only supported on Linux)
-Z, --zerocopy            use a 'zero copy' method of sending data
-O, --omit N              omit the first n seconds
-T, --title str           prefix every output line with this string
--get-server-output       get results from server
[KMG] indicates options that support a K/M/G suffix for kilo-, mega-, or
giga-
iperf3 homepage at: http://software.es.net/iperf/
Report bugs to: https://github.com/esnet/iperf
...

```

Use **iperf3 -s -p 5000** to enable iperf3 server listening on port 5000 on device1:

```

...
root@Teltonika:~# iperf3 -s -p 5000
-----
Server listening on 5000
-----
...
```

Use **iperf3 -c IPADDRESS -p 5000 -t 5** to launch iperf3 client on device2:

```

...
root@Teltonika:~# iperf3 -c 192.168.1.111 -p 5000 -t 10
Connecting to host 192.168.1.111, port 5000
[ 4] local 192.168.1.1 port 45060 connected to 192.168.1.111 port 5000
[ ID] Interval          Transfer    Bandwidth      Retr  Cwnd
[ 4]  0.00-1.12  sec   8.75 MBytes  65.7 Mbits/sec   0   28.5 KBytes
[ 4]  1.12-2.11  sec   6.93 MBytes  58.7 Mbits/sec   1   29.9 KBytes
[ 4]  2.11-3.09  sec   7.50 MBytes  64.4 Mbits/sec   0   31.4 KBytes
[ 4]  3.09-4.09  sec   8.27 MBytes  68.7 Mbits/sec   1   31.4 KBytes
[ 4]  4.09-5.07  sec   7.85 MBytes  67.6 Mbits/sec   0   34.2 KBytes
-----
[ ID] Interval          Transfer    Bandwidth      Retr
[ 4]  0.00-10.08 sec  78.7 MBytes  65.5 Mbits/sec   3
[ 4]  0.00-10.08 sec  78.7 MBytes  65.5 Mbits/sec
receiver
iperf Done.
...

```

---

## Search commands

---

1. **grep <pattern> <file>** command searches for a pattern in a file.

Example: use **grep version /etc/config/system** to see only version in file "system":

```
...
root@Teltonika:~# grep version /etc/config/system
option device_fw_version 'RUT2XX_R_00.01.12'
...
```

---

2. **find <path> -name <"pattern">** command finds files or directories in specified directory that start with "pattern".

Example: use **find / -name "modbus"** to find file or directory in root that start with "modbus":

```
...
root@Teltonika:~# find / -name "modbus"
/etc/config/modbus
/overlay/upper/etc/config/modbus
/rom/etc/config/modbus
...
...
```

---

## Piping commands

---

1. | pipe is command that lets you use two or more commands such that output of one command serves as input to the next.

Example: use **logread |grep dhcp** to see only dhcp info on logread file:

```
...
root@Teltonika:~# logread |grep dhcp
Fri Apr  3 18:58:40 2020 daemon.info dnsmasq-dhcp[2945]: DHCP, IP range
192.168.1.100 -- 192.168.1.249, lease time 12h
Fri Apr  3 18:58:40 2020 daemon.info dnsmasq-dhcp[2945]: read /etc/ethers - 0
addresses
Fri Apr  3 18:58:43 2020 daemon.notice netifd: wan3 (3120): udhcpc: started,
v1.30.1
Fri Apr  3 18:58:44 2020 daemon.notice netifd: wan3 (3120): udhcpc: sending
discover
Fri Apr  3 18:58:47 2020 daemon.notice netifd: wan3 (3120): udhcpc: sending
discover
```

```
Fri Apr  3 18:58:47 2020 daemon.notice netifd: wan3 (3120): udhcpc: sending
select for 192.168.88.197
Fri Apr  3 18:58:47 2020 daemon.notice netifd: wan3 (3120): udhcpc: lease of
192.168.88.197 obtained, lease time 86400
...

```

---