

# TRB245 Reboot

[Main Page](#) > [TRB Gateways](#) > [TRB245](#) > [TRB245 Manual](#) > [TRB245 WebUI](#) > [TRB245 System section](#) > **TRB245 Reboot**

The information in this page is updated in accordance with firmware version [TRB2\\_R\\_00.07.08](#).



## Contents

- [1 Summary](#)

## Summary

The **Reboot** button is used only to reboot the device. Click the 'Reboot' button if you wish to reboot the device. Button can be found by pressing the marked icon:



---

After confirming, device will be rebooted.

