

TRM250 Powering Options

[Main Page](#) > [TRM Modems](#) > [TRM250](#) > [TRM250 Manual](#) > **TRM250 Powering Options**

This chapter contains information on **powering options** supported by TRM250 modems.

□

Contents

- [1 USB connector](#)

USB connector

This device has a USB connector and is powered via a micro USB cable. Operating Voltage - 5V.

✘