

TRM500 LEDs

[Main Page](#) > [TRM Modems](#) > [TRM500](#) > [TRM500 Manual](#) > **TRM500 LEDs**

This page contains information the different types of LEDs and their behaviour on a TRM500 device.



Contents

- [1 Power LED](#)
- [2 Mobile network type LEDs](#)

Power LED

The **power LED** is located on the bottom left corner of the front panel, just under the power connector.



It indicates whether the device is powered on or not.

	State	Description
LED turned on		Device is powered on.
LED turned off		Device is not powered on.

Mobile network type LEDs

The **mobile network type LED** is located on right side of the back panel:



Indicates that the device has an Internet connection.

	Action	Description
Flicker slowly (200 ms High/1800 ms Low)		Network searching.
Flicker slowly (1800 ms High/200 ms Low)		Idle.
Flicker quickly (125 ms High/125 ms Low)		Data transfer is ongoing.
Always ON		Voice calling.
Always OFF		Minimum functionality mode.

The **5G LED** is located on right side of the back panel:



Indicates that the device is connected to a 5G network.

	Action	Description
On		Device is connected to a 5G network.
Off		Device is connected to other networks (LTE, WCDMA).