

Template:Networking bat1xx first start hardware installation

Hardware installation

1. Connect Teltonika Network device power input (**PWR**) with BAT120 power output (**OUT PWR**) using provided 4-pin to 4-pin cable.
2. Connect PSU 4-pin plug to BAT120 power input (**IN PWR**) to power up BAT120 and the end device.

BAT120 Charging

1. Set On/Off slider located on BAT120 front panel to On.
2. Connected provided PSU to IN PWR socket.
3. As BAT120 starts charging, it will also power the Teltonika Network device connected to the OUT PWR socket.