

Template:Networking device manual powering options ground loops

Ground loops

Do not connect the power supply negative terminal of our device to the chassis or earth exclusively.

This connection could cause ground loops. For example, if the antenna shield and power supply negative terminal are connected to the chassis or earth, it forms a ground loop, therefore unwanted current could flow through a device PCB ground and may cause damage.

