

# Template:Networking rut2xx manual modbus modbus tcp table

Field	Value	Description
Enable	yes   no; default: <b>none</b>	Turns Modbus TCP on or off.
Port	integer [0..65535]; default: <b>none</b>	TCP port used for Modbus communications.
Allow Remote Access	yes   no; default: <b>no</b>	Allows remote Modbus connections by adding an exception to the device's firewall on the port specified in the field above.
Mobile Traffic Usage Logging	yes   no; default: <b>no</b>	Enables Mobile Traffic Usage Logging (can also be enabled from <b>Status</b> → <b>Mobile Traffic</b> → <b>[[{{{name}}}_Mobile_Traffic#Configuration Configuration]]</b> ). This is required in order to read mobile data usage information from Modbus registers.