

Template:Networking rut36x manual input output status

ioman gpio dio0 - Configurable input/output (PIN3)
ioman gpio dio1 - Configurable input/output (PIN4)

Call command **ubus call value status**:

```
root@Teltonika-{{name}}:~# ubus call ioman gpio dio0 status
{
    "value": "0",
    "direction": "in",
    "bi_dir": false,
    "invert_input": false
}
```

- **dio0** is configurable input / output:
 - "value": "**0**" means low level state.
 - "value": "**1**" means high level state.
 - "direction": "**in**" means input state.
 - "direction": "**out**" means output state.

To change input settings, use the **update** command and specify a value:

```
ubus call ioman gpio dio0 update '{"value":"0"}'
ubus call ioman gpio dio0 update '{"value":"1"}'
ubus call ioman gpio dio0 update '{"direction":"in"}'
ubus call ioman gpio dio0 update '{"direction":"out"}'
```