

Template:Networking rut9xx manual input output input rule table

Field	Value	Description
Enable	yes no; default: yes	Turns the input rule on or off.
Input type	Digital 4PIN; default: Digital 4PIN	Selects to which input pin the rule will apply.
Trigger	Low level High level Both; default: Low level	Selects which input state will trigger the rule.
Action	Send SMS Change SIM card Send email Change profile Turn on WiFi Turn off WiFi Reboot Activate output HTTP POST/GET; default: Send SMS	<p>The action that will be taken when the rule is triggered.</p> <ul style="list-style-type: none">• Send SMS - sends an SMS message to a specified number(s) or user group. The message text is custom.• Change SIM card - switches to the SIM card that is not currently in use.• Send email - sends an email to the specified address(es). You will be prompted to enter your email account's authentication information.• Change profile - switches to using another configuration profile. Configuration profiles can be created via the <i>System</i> → <i>Profiles</i> page.• Turn on WiFi/Turn off WiFi - turns WiFi on or off.• Reboot - reboots the router when a specified amount of time passes or instantly after the trigger occurrence.• Activate output - activates the specified router output.• HTTP POST/GET - performs an HTTP POST or GET action.