

[https://wiki.teltonika-networks.com/view/Template:Networking\\_rut9xx\\_manual\\_input\\_output\\_post\\_get\\_examples\\_table](https://wiki.teltonika-networks.com/view/Template:Networking_rut9xx_manual_input_output_post_get_examples_table)

# Template:Networking rut9xx manual input output post get examples table

Action	POST/GET URL
Turn output on	<a href="http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin">http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin</a>
Turn output off	<a href="http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=off&amp;pin=4pin">http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=off&amp;pin=4pin</a>
Turn output on after a 10 second delay	<a href="http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin&amp;delay=10">http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin&amp;delay=10</a>
Turn output on for 5 seconds	<a href="http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin&amp;time=5">http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin&amp;time=5</a>
Turn output on for 5 seconds after a 10 second delay	<a href="http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin&amp;delay=10&amp;time=5">http://192.168.1.1/cgi-bin/output?username=user1&amp;password=user1&amp;action=on&amp;pin=4pin&amp;delay=10&amp;time=5</a>