

Template:Networking rutos manual modbus modbus tcp set parameters table

Set Parameters

The Modbus daemon can also set some device parameters.

value to set	register address	register number	register value	description
Hostname	7	8	Hostname (in decimal form)	Changes hostname
Device name	71	72	Device name (in decimal form)	Changes device name
Reboot	206	207	1	Reboots the router
Switch PIN 3 state	324	325	1 0	Toggles PIN 3 ON or OFF, when output is selected
Switch PIN 4 state	325	326	1 0	Toggles PIN 4 ON or OFF, when output is selected
Switch PIN 3 direction	326	327	1 0	Toggles PIN 3 direction between INPUT (0) or OUTPUT (1)
Switch PIN 4 direction	327	328	1 0	Toggles PIN 4 direction between INPUT (0) or OUTPUT (1)
Change LAN IP	394	395	IPv4 (in decimal form)	Changes device LAN IP