

# Template:Networking rutos manual modbus modbus tcp set parameters table rut2 rut9

## Set Parameters

---

The Modbus daemon can also set some device parameters.

value to set	register address	register number	register value	description
Hostname	7	8	Hostname (in decimal form)	Changes hostname
Device name	71	72	Device name (in decimal form)	Changes device name
Reboot	206	207	1	Reboots the router
Switch PIN 3 state	324	325	1 0	Toggles PIN 3 ON or OFF, when output is selected
Switch PIN 4 state	325	326	1 0	Toggles PIN 4 ON or OFF, when output is selected
Switch PIN 3 direction	326	327	1 0	Toggles PIN 3 direction between INPUT (0) or OUTPUT (1)
Switch PIN 4 direction	327	328	1 0	Toggles PIN 4 direction between INPUT (0) or OUTPUT (1)
Change LAN IP	394	395	IPv4 (in decimal form)	Changes device LAN IP