

# Template:Networking rutos manual traffic log

The **Traffic Log** section displays traffic which goes through one of the WAN interfaces. The device does collect data for the Traffic Log by default. To see Traffic Log information you must first enable Traffic Logging from the Services → `[[{{{name}}}]` Traffic Logging|Traffic Logging]] page.

The figure below is an example of the Traffic Log.

