

Template:Networking rutx08 manual remote management options table

Remote control method	Can get parameters	Can set parameters
[[{{{name}}}_Remote_Monitoring_%26_Administration#RMS RMS]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
[[{{{name}}}_Remote_Monitoring_%26_Administration#SSH_access SSH]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
[[{{{name}}}_Remote_Monitoring_%26_Administration#HTTP_access HTTP]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
[[{{{name}}}_Remote_Monitoring_%26_Administration#VPN VPN]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
[[{{{name}}}_Remote_Monitoring_%26_Administration#SNMP SNMP]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
[[{{{name}}}_Remote_Monitoring_%26_Administration#Modbus_TCP Modbus TCP]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
[[{{{name}}}_Remote_Monitoring_%26_Administration#MQTT MQTT]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
[[{{{name}}}_Remote_Monitoring_%26_Administration#TR-069 TR-069]]	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>