

[https://wiki.teltonika-networks.com/view/Template:Networking\\_rutx50\\_manual\\_supported\\_frequency\\_bands\\_table](https://wiki.teltonika-networks.com/view/Template:Networking_rutx50_manual_supported_frequency_bands_table)

# Template:Networking rutx50 manual supported frequency bands table

Product code	Region (operator)	Supported bands
RUTX50 0****	Europe, the Middle East, Africa, Oceania, Brazil, Brazil	<ul style="list-style-type: none"><li><b>5G (NR NSA/SA):</b> n1 (2100 MHz), n3 (1800 MHz), n5 (850 MHz), n7 (2600 MHz), n8 (900 MHz), n20 (800 MHz), n28 (700 MHz), n38 (2600 MHz), n40 (2300 MHz), n41 (2500 MHz), n77 (3700 MHz), n78 (3500 MHz)</li><li><b>4G (LTE-FDD):</b> B1 (2100 MHz), B3 (1800 MHz), B5 (850 MHz), B7 (2600 MHz), B8 (900 MHz), B20 (800 MHz), B28 (700 MHz), B32 (1500 MHz)</li><li><b>4G (LTE-TDD):</b> B38 (2600 MHz), B40 (2300 MHz), B41 (2400 MHz), B42 (3500 MHz), B43 (3600 MHz)</li><li><b>3G:</b> B1 (2100 MHz), B5 (850 MHz), B8 (900 MHz)</li></ul>