

*[https://wiki.teltonika-networks.com/view/Template:Networking\\_trm\\_manual\\_powering\\_options\\_power\\_socket](https://wiki.teltonika-networks.com/view/Template:Networking_trm_manual_powering_options_power_socket)*

# **Template:Networking trm manual powering options power socket**

This device has a USB connector and is powered via a micro USB cable. Operating Voltage - 5V.

