

# Template:Rut850 connection status leds table

The LEDs display the router's current connection state and network type among a few other things:

<b>ACTION</b>	<b>DESCRIPTION</b>
<b>2G, 3G and 4G LEDs blinking every 1 sec</b>	No SIM or bad PIN
<b>Repeated blinking from 2G LED to 4G LED</b>	SIM holder not inserted
<b>2G LED blinking every 1 sec</b>	Connected 2G, no data session established
<b>3G LED blinking every 1 sec</b>	Connected 3G, no data session established
<b>4G LED blinking every 1 sec</b>	Connected 4G, no data session established
<b>2G LED turned ON</b>	Connected 2G with data session
<b>3G LED turned ON</b>	Connected 3G with data session
<b>4G LED turned ON</b>	Connected 4G with data session
<b>2G LED blinking rapidly</b>	Connected 2G with data session and data is being transferred
<b>3G LED blinking rapidly</b>	Connected 3G with data session and data is being transferred
<b>4G LED blinking rapidly</b>	Connected 4G with data session and data is being transferred