

Template:Rut9M connection status led table

Connection status LED

The **connection status LED** is located on the bottom right corner of the front panel, to the left of the signal strength indication LEDs:



The LED displays the router's current connection state and network type among a few other things:

ACTION	DESCRIPTION
Green and red blinking alternatively ever 500 ms	No SIM or bad PIN
Green, red and orange blinking alternatively every 500 ms	Connecting to GSM
Red blinking every 1 sec	Connected 2G, no data session established
Orange blinking every 1 sec	Connected 3G, no data session established
Green blinking every 1 sec	Connected 4G, no data session established
Red lit and blinking rapidly while data is being transferred	Connected 2G with data session
Orange lit and blinking rapidly while data is being transferred	Connected 3G with data session
Green lit and blinking rapidly while data is being transferred	Connected 4G with data session