

# Template:Rut9M connection status led table

## Connection status LED

The **connection status LED** is located on the bottom right corner of the front panel, to the left of the signal strength indication LEDs:



The LED displays the router's current connection state and network type among a few other things:

<b>ACTION</b>	<b>DESCRIPTION</b>
<b>Green and red</b> blinking alternatively ever 500 ms	No SIM or bad PIN
<b>Green, red and orange</b> blinking alternatively every 500 ms	Connecting to GSM
<b>Red</b> blinking every 1 sec	Connected 2G, no data session established
<b>Orange</b> blinking every 1 sec	Connected 3G, no data session established
<b>Green</b> blinking every 1 sec	Connected 4G, no data session established
<b>Red lit and blinking rapidly while data is being transferred</b>	Connected 2G with data session
<b>Orange lit and blinking rapidly while data is being transferred</b>	Connected 3G with data session
<b>Green lit and blinking rapidly while data is being transferred</b>	Connected 4G with data session