

[https://wiki.teltonika-networks.com/view/Template:Webui\\_network\\_lan\\_dhcp\\_general\\_setup](https://wiki.teltonika-networks.com/view/Template:Webui_network_lan_dhcp_general_setup)

# Template:Webui network lan dhcp general setup

The **General Setup** tab is used to set DHCP server settings. The figure below is an example of the General Setup tab and the table below provides information on the fields contained in that tab: