

*[https://wiki.teltonika-networks.com/view/Template:Webui\\_services\\_rs232\\_rs232\\_configuration\\_console](https://wiki.teltonika-networks.com/view/Template:Webui_services_rs232_rs232_configuration_console)*

# **Template:Webui services rs232 rs232 configuration console**

In **Console** mode the serial interface is set up as a Linux console that can be used to control the device (much like a regular SSH connection, except established via RS232). It can be used for debugging purposes, to get the status of the device or to control it. Click [here](#) to find a guide on how to set up RS232 in console mode.