

[https://wiki.teltonika-networks.com/view/Template:Webui\\_services\\_rs232\\_rs232\\_configuration\\_general](https://wiki.teltonika-networks.com/view/Template:Webui_services_rs232_rs232_configuration_general)

# Template:Webui services rs232 rs232 configuration general

The **RS232 Configuration** section is used to configure the parameters of the RS232 serial connection. Parameters used should be selected in accordance with the needs of the user and the type of device connected via the RS232 port.

The figure below is an example of the RS232 Configuration section and the table below provides information on the fields contained in that section: