

Template:Webui services rs232 rs232 configuration ntrip client table

field name	value	description
IP address	ip; Default: 0.0.0.0	IP address of the NTRIP server
Port	integer; Default: none	TCP/UDP port used for communication with NTRIP server
Mount point	path to a file; Default: none	NTRIP mount point
Data format	NTRIP v2.0 TCP/IP NTRIP v2.0 RSTP/RTP NTRIP v1.0 Automatic detection NTRIP v2.0 UDP; Default: NTRIP v1.0	NTRIP version
User name	string; Default: none	User name used for NTRIP authentication
Password	string; Default: none	Password used for NTRIP authentication
Default NMEA string	string; Default: none	Optional NMEA string that will be used as the default value when initiating the connection to the NTRIP server (this value is only sent to the server if there is no NMEA from router's GPS device)