

[https://wiki.teltonika-networks.com/view/Template:Webui\\_services\\_rs232\\_rs232\\_configuration\\_over\\_ip](https://wiki.teltonika-networks.com/view/Template:Webui_services_rs232_rs232_configuration_over_ip)

# Template:Webui services rs232 rs232 configuration over ip

In **Over IP** serial type the device provides a connection to a TCP/IP network for the devices connected via the serial interface. The figure below is an example of available configuration fields for the Over IP serial type and the table below provides information on these fields: