

## Where are MAIN and AUX LTE antenna connectors on RUT9XX and RUT240?

RUT9XX Main LTE antenna connector depends on router's LTE module:

- RUT9XX series routers with product codes that contain "RUT95x **1**xxxxx" , "RUT95x **7**xxxxx", "RUT95x **G**xxxxx", "RUT95x **H0**xxxxx", "RUT95x **U0**xxxxx" or "RUT95x **T0**xxxxx" have their Main LTE antenna connector located near the SIM 2 slot
- RUT9XX series routers with product codes that contain "RUT95x **A**xxxxx" or "RUT95x **H**xxxxx" have their Main LTE antenna connector located near the SIM 1 slot
- RUT240 Main LTE antenna connector is the one on the **right side** of the back panel:



More detailed information on antenna connectors can be found in Front and Back Panel pages:

- RUT240: [here](#)
- RUT950: [here](#)
- RUT955: [here](#)