

BAT120 LEDs

[Main Page](#) > [BAT Uninterruptable Power Supplies](#) > [BAT120](#) > [BAT120 Manual](#) > **BAT120 LEDs**

This wiki page contains information about BAT120 **LEDs** and their actions.



Contents

- [1 Power IN LED](#)
- [2 Power OUT LED](#)
- [3 Power LEDs](#)
- [4 Combined LED states](#)

Power IN LED

The **IN PWR LED** is the left-most located LED on the front panel:



Action	Description
LED turned ON	PSU connected to IN PWR socket

Power OUT LED

The **OUT PWR LED** is the second from the left LED located on the front panel:



Action	Description
LED turned ON	OUT PWR socket connected to the device

Power LEDs

The **Power LEDs** are located in the middle of the front panel:



Action	Description
LED turned ON	Shows BAT120 state of charge. Each LED equals to 25% of SOC.

Combined LED states

Some of the states are shown with multiple LEDs:

Action	Description
All LEDs blinking every 500ms	BAT120 overheated.
OUT PWR LED blinking every 500ms	OUT PWR shorted.
Power LEDs lighting up in sequence	BAT120 is charging.
Power LEDs blink every 5 seconds	BAT120 is in sleep mode.