

QSG OTD140

[Main Page](#) > [OTD Outdoor routers](#) > [OTD140](#) > **QSG OTD140**

This Wiki page contains the online version of the **Quick Start Guide (QSG)** for the **OTD140 Outdoor Router**. Here you will find an overview of the various components on the front and back of a OTD140 device, hardware installation instructions, first login information, device specifications, and general safety information. It is highly recommended to acquaint yourself with the Quick Start Guide before using the device. You can also locate a printed version of the Quick Start Guide in the packaging box of your device.

□

Contents

- [1 Safety information](#)
 - [1.1 General](#)
 - [1.2 PoE standards](#)
 - [1.3 The difference between PoE alternative A and alternative B](#)
 - [1.4 Operating conditions](#)
 - [1.5 Faulty and damaged products](#)
 - [1.6 Electrical safety](#)
 - [1.7 Product handling](#)
- [2 Front view](#)
- [3 Back view](#)
- [4 OTD140 ETH Ports](#)
- [5 OTD140 Mounting Bracket](#)
- [6 Video Quick Start Guide](#)
- [7 Hardware installation](#)
- [8 Configure your computer LAN \(Windows\)](#)
- [9 Mounting instruction](#)
 - [9.1 Wall Mounting](#)
 - [9.2 Pole Mounting](#)
- [10 Login to device](#)



Safety information

Before starting operating the device, please review recommendations and precautions to minimize the possibility of accidents. Safety precautions presented are supplementary and subject to the local safety regulations. When various operations are executed on the device, the user must fully follow the safety instructions and recommendations provided with the device.

General

Technical specifications

Input voltage range 42.5-57.0 VDC, reverse polarity protection, voltage surge/transient protection

Radio specifications

RF technologies 2G, 3G, 4G

Max RF power 35 dBm@GSM, 25dBm@WCDMA, 25 dBm@LTE

Integrated antennas specifications

Mobile antennas 2 x 698~960 / 1710 ~ 2690MHz, 50 Ω, VSWR<3.5, gain 0.5 / 3 dBi (698~960 / 1710 ~ 2690MHz), omnidirectional

* Order code dependant.

OTD140 outdoor router must be used in compliance with any and all applicable national and international laws and with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.

PoE standards

This device uses PoE alternative B.

The difference between PoE alternative A and alternative B

Alternative A:

802.3af and 802.3at Alternative A connection. The power sourcing equipment applies a positive voltage to pins 1-2 and a negative voltage to pins 3-6.

















802.3af/at Alternative A:

Pins at switch	T568A Color	T568B Color	10/100 Alternative A, mixed DC & data	1000 (1 gigabit) Alternative A, DC & bi-data
Pin 1	<input type="checkbox"/> white/green stripe	<input type="checkbox"/> white/orange stripe	Rx + DC +	TxRx A DC +
Pin 2	<input type="checkbox"/> green solid	<input type="checkbox"/> orange solid	Rx - DC +	TxRx A DC +
Pin 3	<input type="checkbox"/> white/orange stripe	<input type="checkbox"/> white/green stripe	Tx + DC -	TxRx B DC -
Pin 4	<input type="checkbox"/> blue solid	<input type="checkbox"/> blue solid	Unused Unused	TxRx C +
Pin 5	<input type="checkbox"/> white/blue stripe	<input type="checkbox"/> white/blue stripe	Unused Unused	TxRx C -
Pin 6	<input type="checkbox"/> orange solid	<input type="checkbox"/> green solid	Tx - DC -	TxRx B DC -
Pin 7	<input type="checkbox"/> white/brown stripe	<input type="checkbox"/> white/brown stripe	Unused Unused	TxRx D +
Pin 8	<input type="checkbox"/> brown solid	<input type="checkbox"/> brown solid	Unused Unused	TxRx D -

Alternative B:

802.3af and 802.3at Alternative B connection. The power sourcing equipment applies a positive voltage to pins 4-5 and a negative voltage to pins 7-8.

802.3af/at Alternative B:

Pins at switch	T568A Color	T568B Color	10/100 Alternative B, DC on spares	1000 (1 gigabit) Alternative B, DC & bi-data
Pin 1	 white/green stripe	 white/orange stripe	Rx +	TxRx A +
Pin 2	 green solid	 orange solid	Rx -	TxRx A -
Pin 3	 white/orange stripe	 white/green stripe	Tx +	TxRx B +
Pin 4	 blue solid	 blue solid	DC +	TxRx C + DC +
Pin 5	 white/blue stripe	 white/blue stripe	DC +	TxRx C - DC +
Pin 6	 orange solid	 green solid	Tx -	TxRx B -
Pin 7	 white/brown stripe	 white/brown stripe	DC -	TxRx D + DC -
Pin 8	 brown solid	 brown solid	DC -	TxRx D - DC -

CE Declaration of Conformity

[BG] Bulgarian

С настоящето, TELTONIKA NETWORKS декларира, че OTD140 е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 2014/53/EU

[HR] Croatian

Ovim TELTONIKA NETWORKS izjavljuje da je ovaj OTD140 u skladu s bitnim zahtjevima i ostalim relevantnim odredbama Direktive 2014/53/EU

[CZ] Czech

TELTONIKA NETWORKS tímto prohlašuje, že OTD140 splňuje základní požadavky a všechna příslušná ustanovení Směrnice 2014/53/EU

[DK] Danish

Undertegnede TELTONIKA NETWORKS erklærer herved, at følgende udstyr OTD140 overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU

[NL] Dutch

Hierbij verklaart TELTONIKA NETWORKS dat het toestel I OTD140 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU

[EE] Estonian

Käesolevaga kinnitab TELTONIKA NETWORKS seadme OTD140 vastavust direktiivi 2014/53/EU põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele

[FI] Finish

TELTONIKA NETWORKS vakuuttaa täten että OTD140 tyyppinen laite on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen

[FR] French

TELTONIKA NETWORKS déclare que cette OTD140 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU

[DE] German




Hiermit erklärt TELTONIKA NETWORKS, dass dieser OTD140 den grundlegenden Anforderungen und anderen relevanten Bestimmungen der Richtlinie 2014/53/EU entspricht

[GR] Greek

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Ο ΚΑΤΑΣΚΕΥΑΣΤΗΣ TELTONIKA NETWORKS ΔΗΛΩΝΕΙ ΟΤΙ OTD140 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU

[HU] Hungarian	A TELTONIKA NETWORKS ezzennel kijelenti, hogy a OTD140 típusú berendezés teljesíti az alapvető követelményeket és más 2014/53/EU irányelvben meghatározott vonatkozó rendelkezéseket
[IE] Irish	Leis seo, dearbhaíonn TELTONIKA NETWORKS go gcomhlíonann an OTD140 seo bunriachtanais agus forálacha ábhartha eile Threoir 2014/53/EU
[IT] Italian	Con la presente, TELTONIKA NETWORKS dichiara che questo OTD140 è conforme ai requisiti essenziali e ad altre disposizioni pertinenti della Direttiva 2014/53/EU
[LV] Latvian	Ar šo TELTONIKA NETWORKS deklarē, ka OTD140 atbilst Direktīvas 2014/53/EU būtiskajām prasībām un citiem ar to saistītajiem noteikumiem
[LT] Lithuanian	Šiuo dokumentu UAB TELTONIKA NETWORKS deklaruoja, kad šis OTD140 atitinka esminius reikalavimus ir kitas 2014/53/EU Direktyvos nuostatas
[MT] Maltese	Hawnhekk, TELTONIKA NETWORKS tiddikjara li dan l-OTD140 huwa konformi mar-rekwiżiti essenzjali u dispożizzjonijiet rilevanti oħra tad Direttiva 2014/53/EU
[NO] Norwegian	TELTONIKA NETWORKS Erklærer herved at OTD140 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/EU
[PL] Polish	Niniejszym TELTONIKA NETWORKS deklaruje że OTD140 jest zgodny z zasadniczymi wymaganiami i innymi właściwymi postanowieniami Dyrektywy 2014/53/EU
[PT] Portuguese	Eu, TELTONIKA NETWORKS declaro que o OTD140 cumpre os requisitos essenciais e outras provisões relevantes da Directiva 2014/53/EU
[RO] Romanian	Prin prezenta, TELTONIKA NETWORKS declară că aparatul OTD140 este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 2014/53/EU
[SK] Slovak	Spoločnosť TELTONIKA NETWORKS týmto vyhlasuje, že smerovač OTD140 je v súlade so základnými požiadavkami a ďalšími príslušnými ustanoveniami smernice 2014/53/EU
[SI] Slovenian	TELTONIKA NETWORKS izjavlja, da je ta OTD140 v skladu z bistvenimi zahtevami in drugimi relevantnimi določili direktive 2014/53/EU
[ES] Spanish	Por la presente, TELTONIKA NETWORKS declara que este OTD140 cumple con los requisitos esenciales y otras exigencias relevantes de la Directiva 2014/53/EU
[SE] Swedish	Härmed intygar TELTONIKA NETWORKS att denna OTD140 är i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU

Detailed compliance information is available at the following internet address: wiki.teltonika-networks.com/view/Certificates.

-  This sign means that it is necessary to read the User's Manual before you start using the device.
-  This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.
-  Hereby, TELTONIKA NETWORKS declares that this OTD140 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://wiki.teltonika-networks.com/view/OTD140_CE/RED.

✘ Hereby, TELTONIKA NETWORKS declares that the radio equipment type OTD140 is in compliance with Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet address:
https://wiki.teltonika-networks.com/view/OTD140_UKCA.

Operating conditions

- Operating temperature: -40° to +75° Celsius
- Humidity should be in the range of 10% to 90% (non-condensing).
- Away from heat source, corrosive substances, salts, and flammable gases

Attention: operation outside the permissible range can considerably shorten the service life of the device.

Faulty and damaged products

- Do not attempt to disassemble the device or its accessories.
- Only qualified personnel must service or repair the device or its accessories.
- If your device or its accessories have been submerged in water punctured or subjected to a severe fall, do not use until they have been checked at an authorized service center.

Electrical safety

- Only use approved accessories.
- Do not connect with incompatible products or accessories.
- It is recommended to ground devices with grounding terminals before connecting them to power. Failure to ground appropriately might result in a shock hazard. The cross-sectional area of the protective grounding conductor should be at least 1mm².

Product handling

- You alone are responsible for how you use your device and any consequences related to its use.
- Use of your device is subject to safety measures designed to protect users and their environment.
- Always treat your device and its accessories with care.
- Do not expose your device or its accessories to open flames, lit tobacco products, liquid, or high humidity.
- Do not drop, throw or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your device or its accessories.
- Do not attempt to disassemble your device (exemptions for devices that require disassembly for SIM insertion) or its accessories: it does not contain any user-serviceable parts. For safety reasons, the equipment should be opened only by qualified personnel.

- Make sure to use ESD personal protective equipment while the equipment is serviced.
- Do not use your device in an enclosed environment where heat dissipation is poor.
- Prolonged use in such space may cause excessive heat and raise ambient temperature, which will lead to the automatic shutdown of your device or the disconnection of the mobile network connection for your safety. To use your device again after such a shutdown, cool it in a well-ventilated place before turning it on.
- Please check all national laws and local regulations for the disposal of electronic products.
- Do not operate the device where ventilation is restricted.
- Do not use or install this product near water to avoid fire or shock hazards.
- Arrange power and Ethernet cables so that they are not likely to be stepped on or have items placed on them.
- Ensure that the voltage and the rated current of the power source match the device's requirements. Do not connect the device to an inappropriate power source.
- During a thunderstorm, no operations should be carried out on the device and cables.
- The unit must be powered off where blasting is in progress and explosive atmospheres are present or near medical life support equipment.
- Do not leave your device and its accessories within reach of small children or allow them to play with it. They could hurt themselves or others and could accidentally damage the device. Your device contains small parts with sharp edges that may cause an injury choking hazard.
- Like any wireless device, this device operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless device for emergency communications or otherwise use the device in situations where the interruption of data connectivity could lead to death, personal injury, property damage, data, or other loss.
- The device may become warm during regular use.

Front view



Back view



OTD140 ETH Ports

<https://wiki.teltonika-networks.com/view/File:OTD140-Connectors.mp4>

 
OTD140 Mounting Bracket




Video Quick Start Guide


Need some help setting up your new Teltonika Networks OTD140 Outdoor Router? Watch our quick start guide video and follow the step-by-step instructions to set up your new router for operation easily.

Hardware installation



Configure your computer LAN (Windows)

1. Ensure the  Network connection is Enabled. Go to Start — Control Panel — Network and Internet — Network and Sharing Center. Click on the **Change adapter settings** in the left panel, then right-click on Network Adapter, and select Enable.
-

2. Check if IP 
and DNS are
obtained
automatically.
Right-click on
Wireless
Network
Adapter and
select
Properties.
Then select
**Internet
Protocol
Version 4** and
click
Properties.
3. If not
selected, check
to **obtain an
IP address**
and **obtain
DNS server
address
automatically**.
Click OK.

Mounting instruction

Wall Mounting

1. The tools and fasteners required for installing the OTD140 depend on the type of wall surface and the chosen fasteners. To secure the OTD140's housing onto the bracket, you will need a screwdriver, ideally one with a PZ2 nozzle.



3. The bracket should be attached to the wall using screws fitting for the type of wall surface. The diameter of the holes should be 4.8 mm, or about 0.19 inches.



5. Insert and tighten the screw provided in the kit to secure the locked housing to the bracket.



Pole Mounting

1. It is recommended to install the OTD on a pole at least 45 mm, or about 1.77 inches, in diameter. Ensure the chosen pole can support the weight of the product, which is 855 g. and you will need a screwdriver, ideally one with a PZ2 nozzle.



2. Remove the bottom part of the OTD140's and remove the bracket by unscrewing the screws.



4. Align the OTD140 with the bracket and press it downward until the OTD140's housing is locked into place on the bracket. This locking should close a gap of about 10 mm, or 0.39 inches.



6. Finally, attach the bottom part of the OTD140's housing to the bottom of the mounted router.



2. Remove the bottom part of the OTD140's and remove the bracket by unscrewing the screws.



3. Select any of the bracket's holes to fit the width of the fastener, either a plastic zipper or a metal lintel. For plastic zippers, the diameter of the holes should be 4.8 mm, or about 0.31 inches. For metal lintel, it should be 8 mm, or about 0.31 inches. Note that product kit does not include any fasteners.



5. Insert and tighten the screw provided in the kit to secure the locked housing to the bracket.



4. Align the OTD140 with the bracket and press it downward until the OTD140's housing is locked into place on the bracket. This locking should close a gap of about 10 mm, or 0.39 inches.



6. Finally, attach the bottom part of the OTD140's housing to the bottom of the mounted router.



Login to device

1. To enter the router's Web interface (WebUI), type <http://192.168.1.1> into the URL field of your Internet browser.



2. When prompted for authentication enter the username admin and enter the password located on the device information label/engraving.



3. After logging in, you must set a new password for security reasons. You will not be able to interact with the router's WebUI until the default password is changed. The new password must consist of a minimum of **8 characters**.

Requirements:
one uppercase letter, one lowercase letter, and one digit.

4. Next, the Configuration Wizard will start to help you set up some of the router's main operational parameters.
