

# RUT140 TR-069

[Main Page](#) > [RUT Routers](#) > [RUT140](#) > [RUT140 Manual](#) > [RUT140 WebUI](#) > [RUT140 Services section](#) > **RUT140 TR-069**

The information in this page is updated in accordance with firmware version [RUT14X\\_R\\_00.07.07.1](#).



## Contents

- [1 Summary](#)
- [2 TR-069 Client Configuration](#)
- [3 Management via TR-069](#)

## Summary

**TR-069 (Technical Report 069)** is an application layer protocol designed for management of equipment connected to a remote network.

This chapter of the user manual provides an overview of the UPnP page in RUT140 devices.

---

TR-069 is additional software that can be installed from the **System** → [Package Manager](#) page.

## TR-069 Client Configuration



| Field                 | Value                                       | Description   |
|-----------------------|---|---|
| Enable                | off   on; default: <b>off</b>               | Turns TR-069 client on or off.                                    |
| Periodic enable       | off   on; default: <b>on</b>                | Turns periodic data transmissions to server on or off.            |
| Accept server request | off   on; default: <b>off</b>               | When enabled the device accepts connection requests from servers. |
| Sending interval      | integer [60..99999999]; default: <b>100</b> | Periodic data transmission frequency (in seconds).                |
| Username              | string; default: <b>easycwmp</b>            | Username used for authentication to a TR-069 server.              |
| Password              | string; default: <b>easycwmp</b>            | Password used for authentication to a TR-069 server.              |

|     |   |  |
|-----|---|--|
| URL | host   ip; default:<br><b>http://192.168.1.110:8080/openacs/acs</b> | IP address or hostname of a TR-069 server. |
|-----|---|--|

## Management via TR-069

TR-069 can be used to set or get values from RUT devices. Below is a list of commands used for device management via TR-069.

- R - read only;
- RW - read/write;
- string(64) - 64 bit string;
- string(256) - 256 bit string;
- unsignedInt - integer storing only positive values.

---

### Device Information:

1. **DeviceInfo.HardwareVersion** - device hardware version (e.g., 0201) R
2. **DeviceInfo.Manufacturer** - device manufacturer (e.g., Teltonika) R
3. **DeviceInfo.ManufacturerOUI** - organizationally unique identifier of the device manufacture (e.g., 001E42) R
4. **DeviceInfo.ProductClass** - device model (e.g., RUT140) R
5. **DeviceInfo.ProvisioningCode** - provisioning code
6. **DeviceInfo.SerialNumber** - device serial number (e.g., 1000111111) R
7. **DeviceInfo.SoftwareVersion** - device software version (e.g., RUT14X\_R\_00.0X.XX) R
8. **DeviceInfo.SpecVersion** - device special version (e.g., 1.0) R

---

### Device IP interface information:

1. **IP.Interface.1.Enable** - interface enabled/disabled (e.g., true) R
2. **IP.Interface.1.IPv4Address.1.Enable** - IPv4 address enabled/disabled (e.g., 1) R
3. **IP.Interface.1.IPv4Address.1.IPAddress** - IPv4 address (e.g., 192.168.1.1) R
4. **IP.Interface.1.Name** - interface name (e.g., lan) R

---

### Device Management Server information:

1. **ManagementServer.ConnectionRequestPassword** - connection request password (e.g., randompassword) R
2. **ManagementServer.ConnectionRequestURL** - connection request URL R
3. **ManagementServer.ConnectionRequestUsername** - connection request username (e.g., 001E42-RUTX14-0000000000) R
4. **ManagementServer.ParameterKey** -
5. **ManagementServer.Password** -
6. **ManagementServer.PeriodicInformEnable** - enabled/disabled TR-069 client periodic data transmission to TR-069 server (e.g., true) R

7. **ManagementServer.PeriodicInformInterval** - periodic data transmission interval (e.g., 300) R
  8. **ManagementServer.PeriodicInformTime** - periodic information time (e.g., 1/1/1970, 8:09:27 PM) R
  9. **ManagementServer.URL** - server URL R
  10. **ManagementServer.Username** - server username R
- 

#### **Device ID information:**

1. **DeviceID.ID** - device ID (e.g., 001E42-RUTX14-0000000000) R
  2. **DeviceID.Manufacturer** - device manufacturer (e.g., Teltonika) R
  3. **DeviceID.OUI** - organizationally unique identifier of the device manufacture (e.g., 001E42) R
  4. **DeviceID.ProductClass** - product class (e.g., RUTXXX) R
  5. **DeviceID.SerialNumber** - device serial number R
- 

#### **Events information:**

1. **Events.0\_BOOTSTRAP** - bootstrap time R
2. **Events.1\_BOOT** - boot time R
3. **Events.Inform** - information time R
4. **Events.Registered** - events reg time R