https://wiki.teltonika-networks.com/view/RUT142 Product Labels

RUT142 Product Labels

<u>Main Page</u> > <u>RUT Routers</u> > <u>RUT142</u> > <u>RUT142 Manual</u> > **RUT142 Product Labels**

The information in this page is relevant from **001** batch.

Label/Print on the box

×

Information displayed after scanning QR code:		Information displayed after scanning SN Barcode:	Information displayed after scanning EAN Barcode:
SN:9999999999;M:AABBCCDDEEFF;B:999;		9999999999	4779051840724
×		×	×
Text on the label/print	QR or Barcode equivaler	t Desc	cription
RUT142000000*	-	Product code a.k.a., ordering code, displays under which product code the device was manufactured. Different product codes indicate different versions of the overall product. For example, devices with different product codes may support different LTE bands, come with different accessories, different firmware, etc. *RUT142000000 is only for standard order codes	
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System (RMS). The device can be added to RMS via the System \rightarrow Administration \rightarrow RMS page	
LAN MAC	М		
EAN	-		ticle Number or EAN) is a standard describing a barcode e to identify a specific retail product type, in a specific or
BATCH NO:	В	Batch number is a number that indicates the batch of	materials

Label/Engraving on the product

×

Information displayed after scanning QR code:	Information displayed after scanning SN Barcode:
WIFI:T:WPA;S:XX9999_9999;P:999999999;SN:999999999;M:AABBCCDDEEFF;U:admin;PW:999999999;B:999;	9999999999
×	×

Scanning the QR code with your mobile device should allow you to connect to the products WiFi.

Text on the label/engraving	QR or Barcode equivalent	Description
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System (\underline{RMS}). The device can be added to RMS via the System \rightarrow Administration \rightarrow <u>RMS</u> page
LAN MAC	М	The media access control (MAC) address is a unique identifier used to distinguish a network interface controller for communication in the data link layer (OSI layer2) Ethernet LAN MAC address - MAC address of the LAN Ethernet network interface. It is also required when connecting the device to Teltonika's Remote Management System (<u>RMS</u>). The device can be added to RMS via the System \rightarrow Administration \rightarrow <u>RMS</u> page
WIFI SSID	S	The broadcasted SSID (Service Set Identifier) of the wireless network
WIFI PASSWORD	Р	A custom passphrase used for authentication (at least 8 characters long)
USERNAME	U	A default value "admin" is used for product connection
PASSWORD	PW	A custom passphrase used for product connection (at least 8 characters long)
BATCH NO:	В	Batch number is a number that indicates the batch of materials